


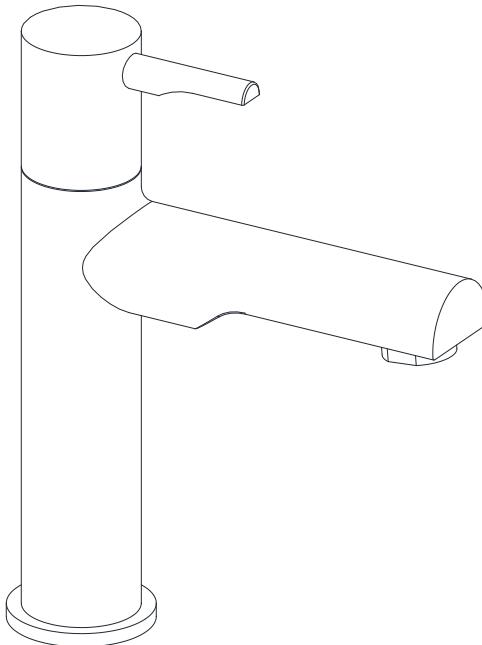


PRODUCT INFORMATION

Pillar Cock



* Representative image


Temp & water pressure Requirement.

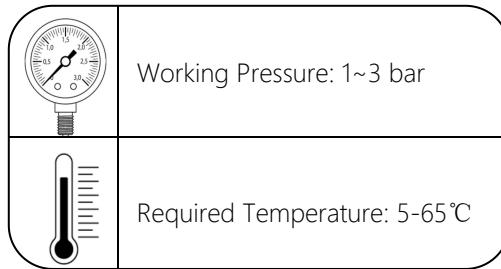

- **Working Pressure**:- The water pressure should be Between 1 and 3 bar for proper functioning.
- **Required Temperature**:- The water temperature within the range of 5-65° for safe & effective use.
- Note:- These are recommended values for achieving conventional /Optimum output.


Guideline for Braided hose Installation

- Keep the hose straight as much as possible.
- Don't twist or bend hose during connection.
- Make sure hose is fully tighten to avoid any leakage.

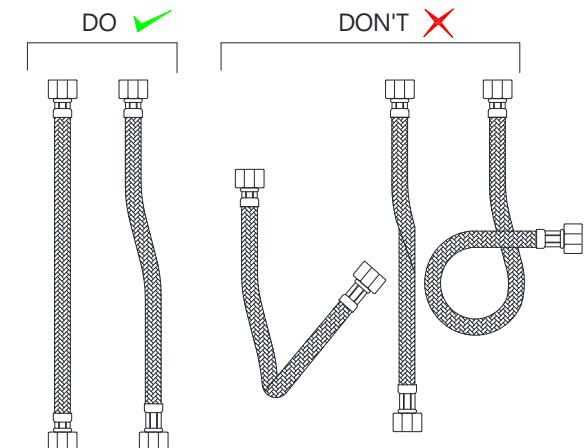


Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL PILLAR COCK.

HOW TO INSTALL

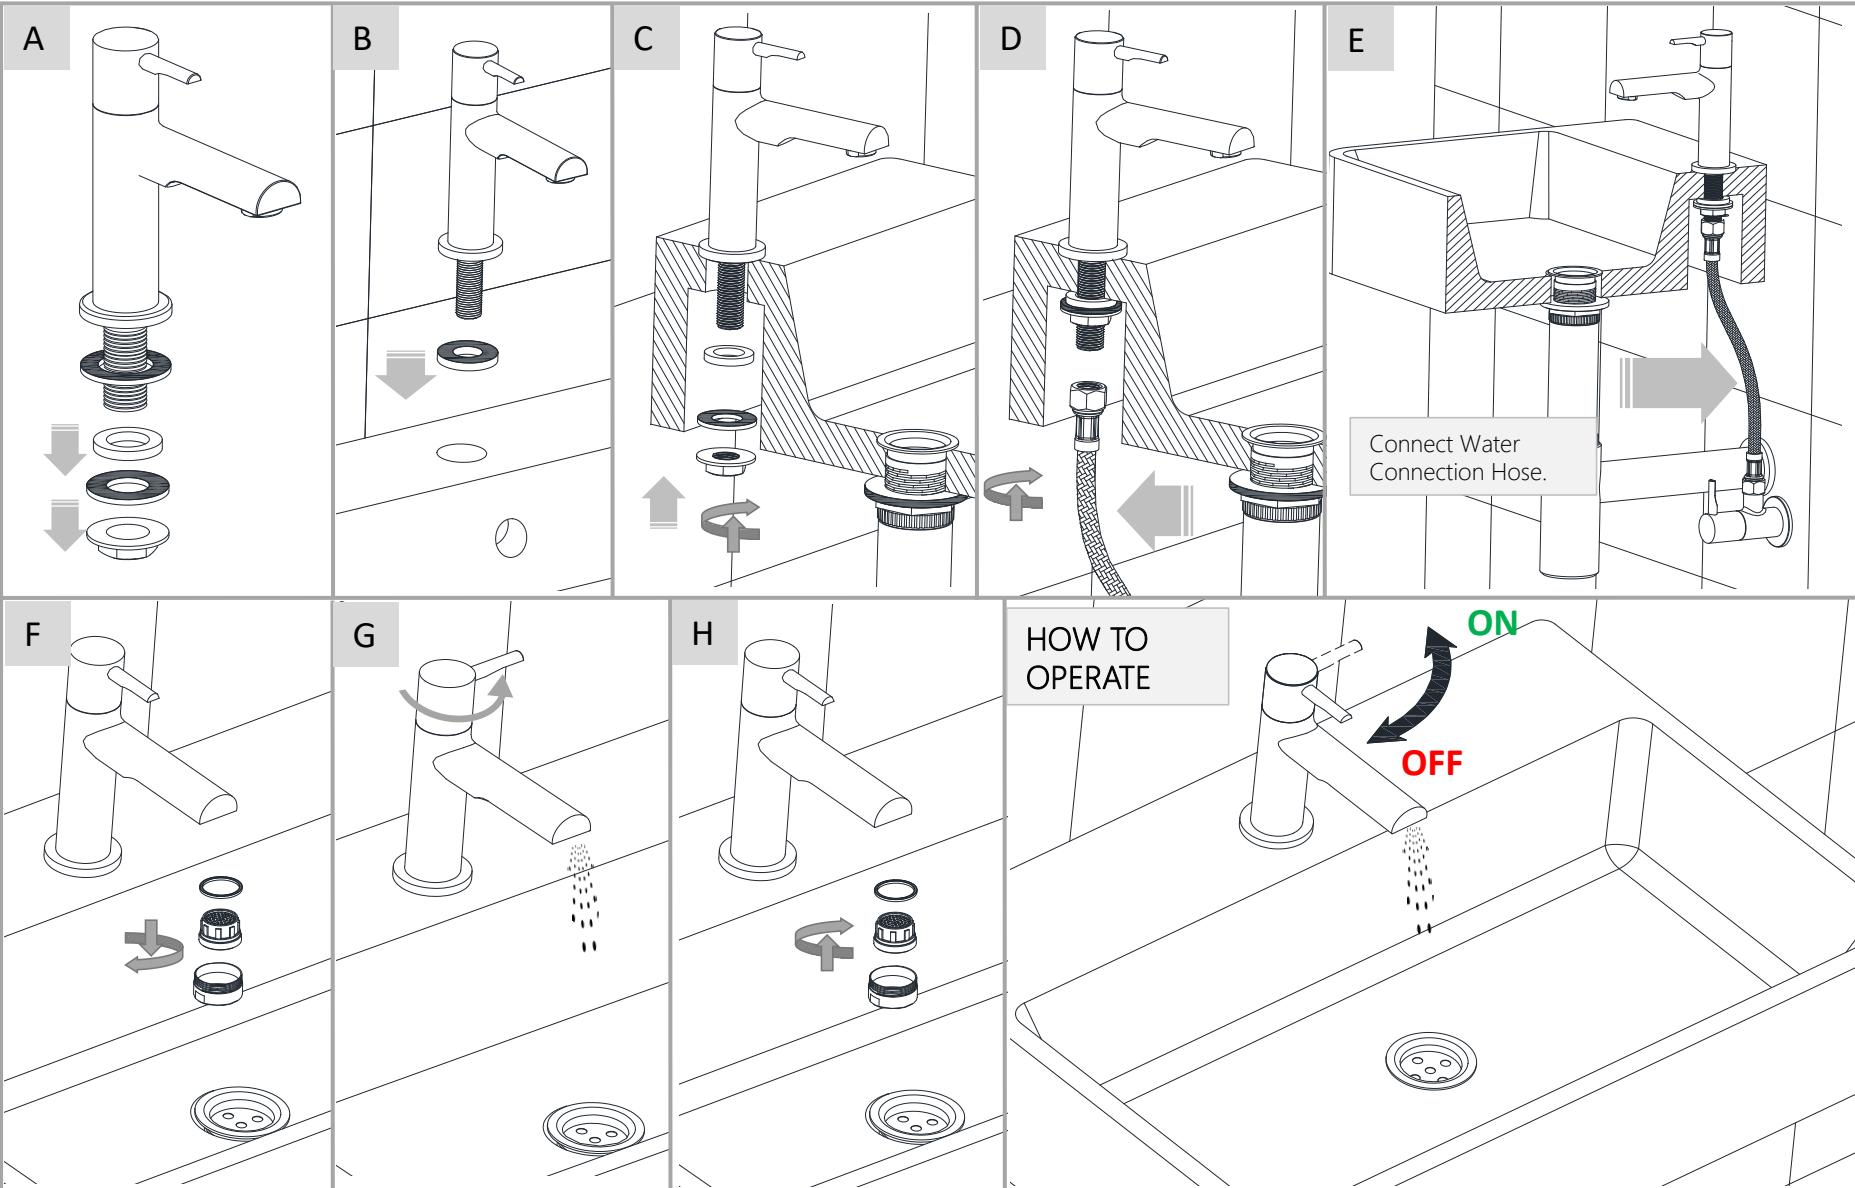

CLEANING INSTRUCTIONS

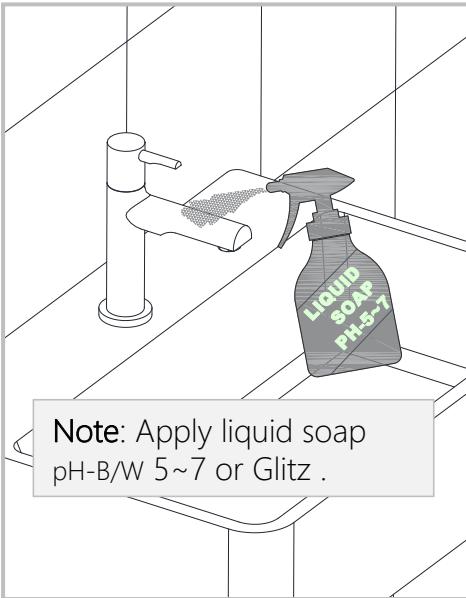

Note: Apply liquid soap pH-B/W 5~7 or Glitz .



Apply soft cotton cloth



Apply soft cotton cloth



✗ DON'T



Don't apply Scrub

✗ DON'T

Steps & Cleaning agents requirements for Cleaning.

