


INSTALLATION METHOD FOR SENSOR BATTERY OPERATED.

This manual can be referred for Below Item codes:-

Product Code
SNR-91019
SNR-91019PK
SNR-91017
SNR-91017PK
SNR-35019PM
SNR-35019PMPK
SNR-35017PM
SNR-35017PMPK
SNR-15019PM
SNR-15019PMPK
SNR-15017PM
SNR-15017PMPK

Note: Technical drawing & images shown in this manual is only for ref purpose, it will vary as per Product code.

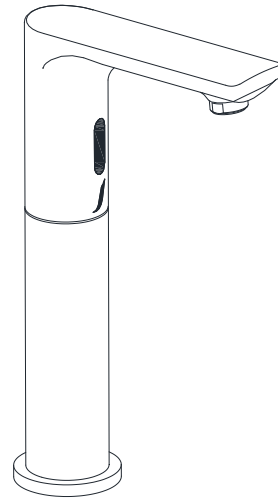

* Representative image


TEMP.& WATER PRESSURE REQUIREMENTS

	Required Pressure: 1~5 bar
	Required Temperature: 5-65°C


Note: Above are the recommended values for getting Conventional Output.

NOTE:-


- 1.Do not install the faucet facing a mirror or any other electronic system operated an infra-red sensor.
- 2.To prevent reflection problem, it is recommended to keep a minimum distance of 1.5meters b/w faucet & Other Items.
- 3.This product should only be fitted by a qualified/certified plumber and should not installed by a non-qualified person.

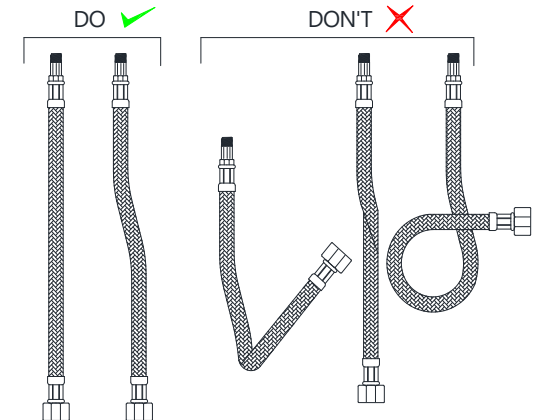

Note: THIS INSTALLATION MANUAL CAN BE REFFERED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.

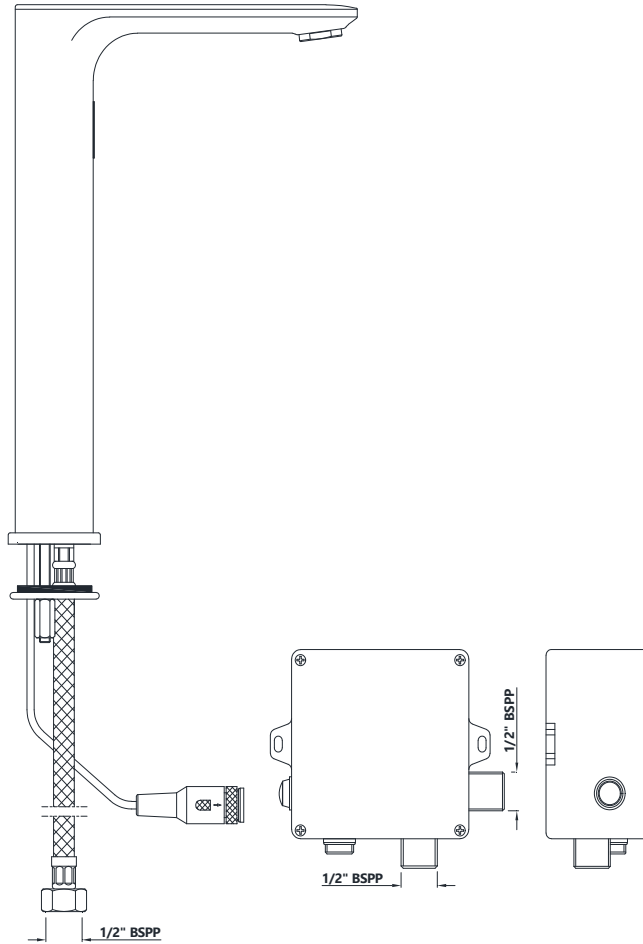WITHOUT PRE-MIX VALVE


* Representative image

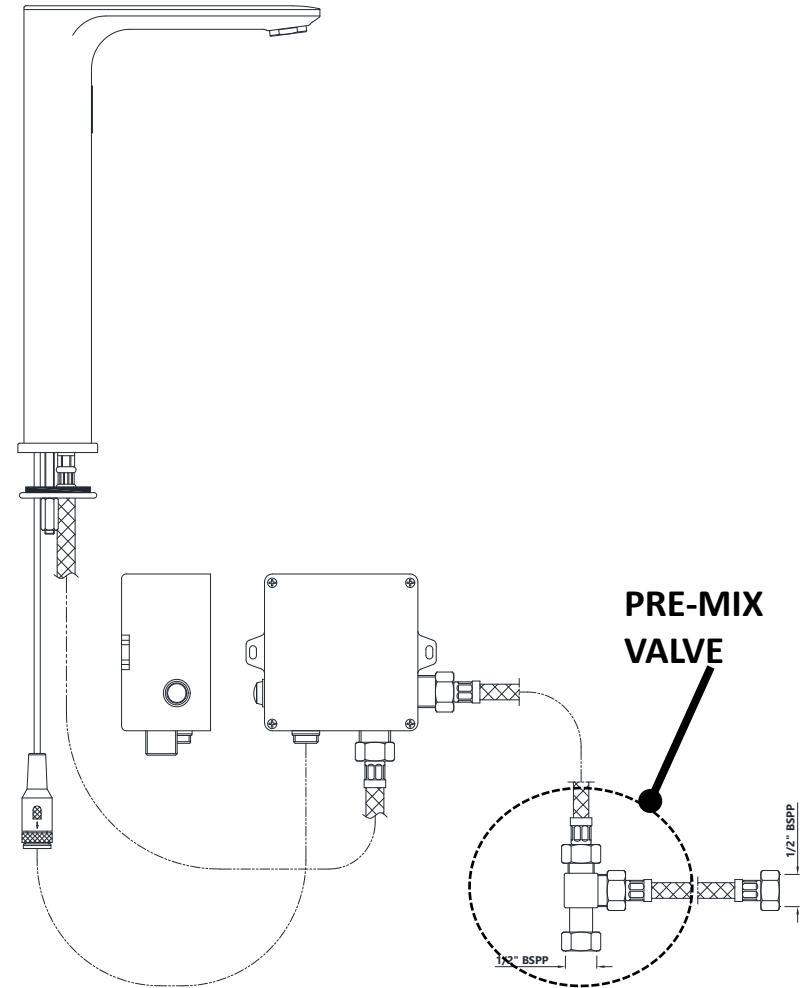WITH PRE-MIX VALVE


* Representative image

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.

INSTALLATION WITHOUT PRE-MIX VALVE

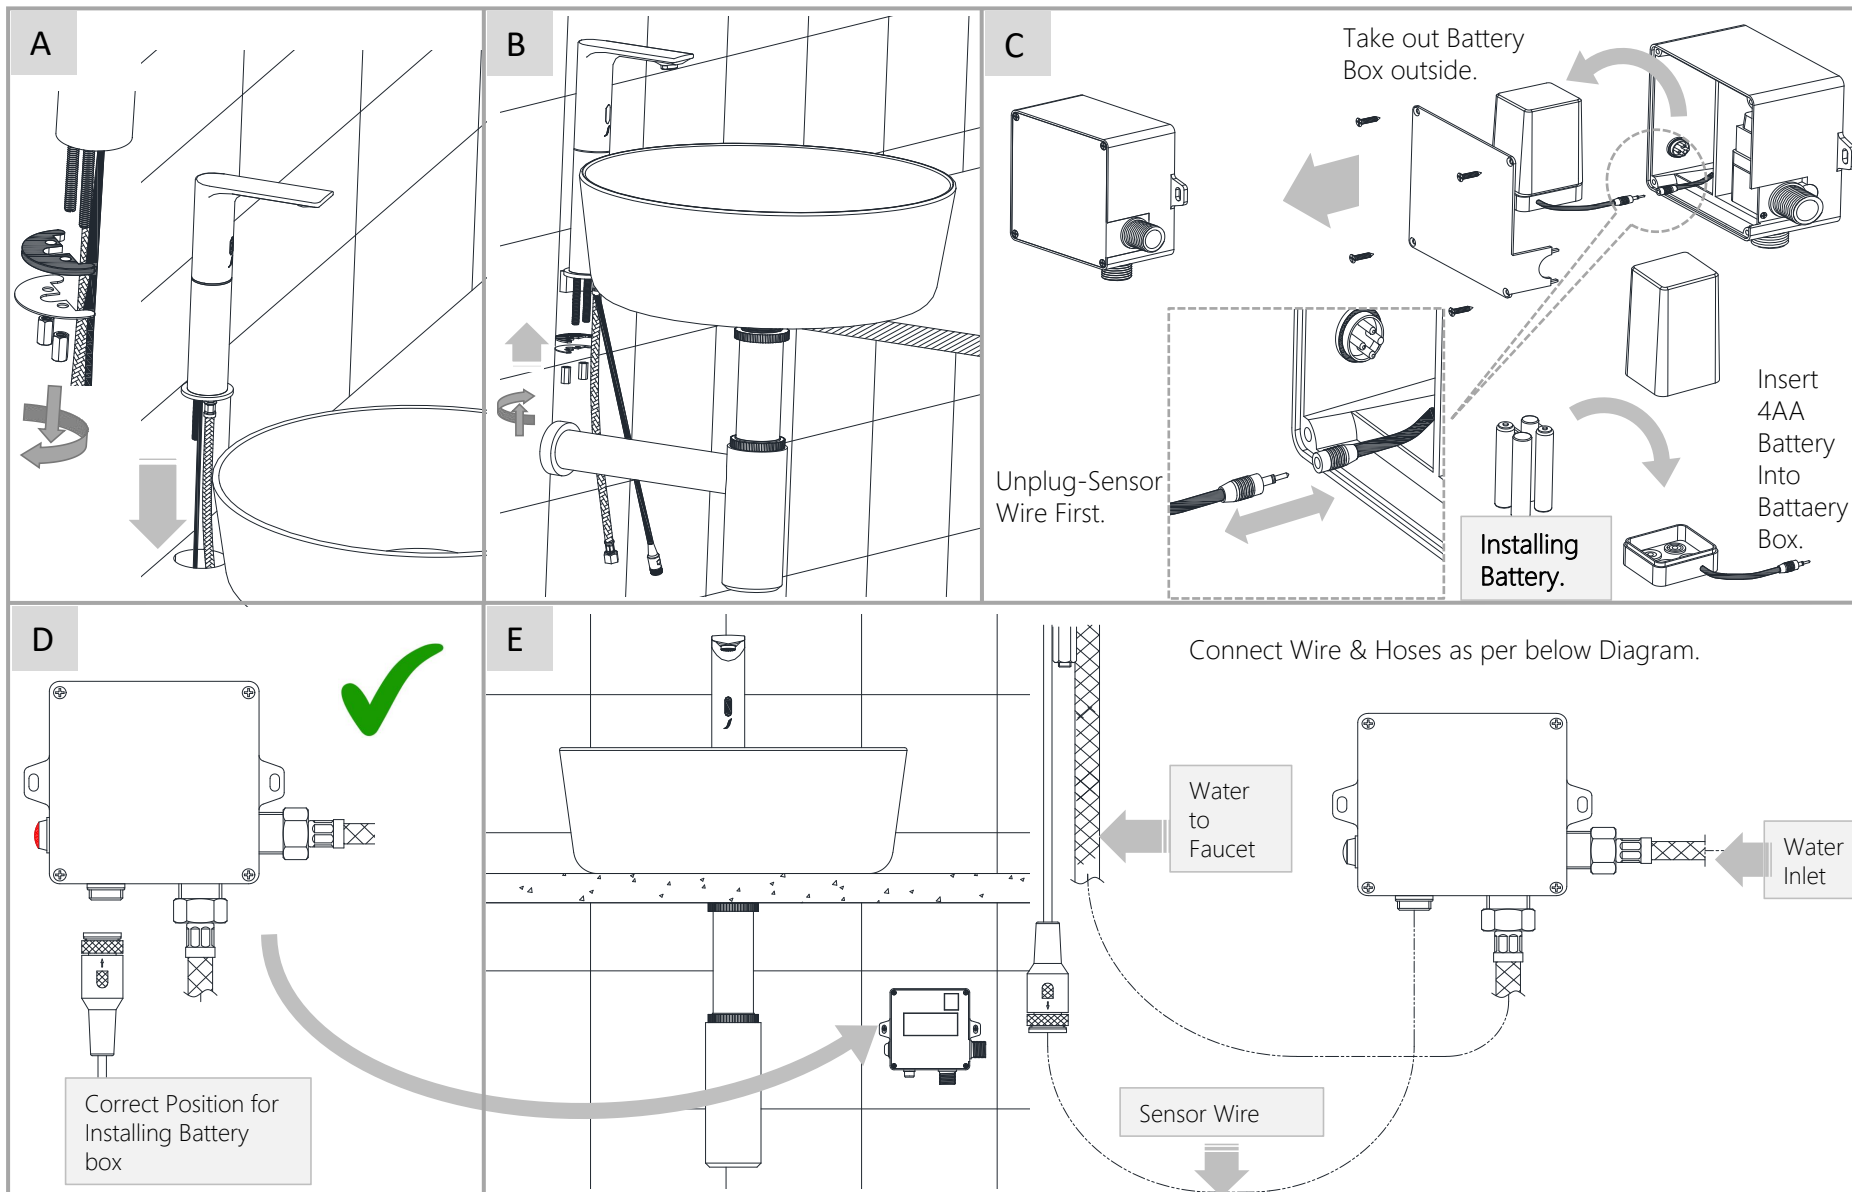

Note: THIS INSTALLATION MANUAL CAN BE REFFERED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.

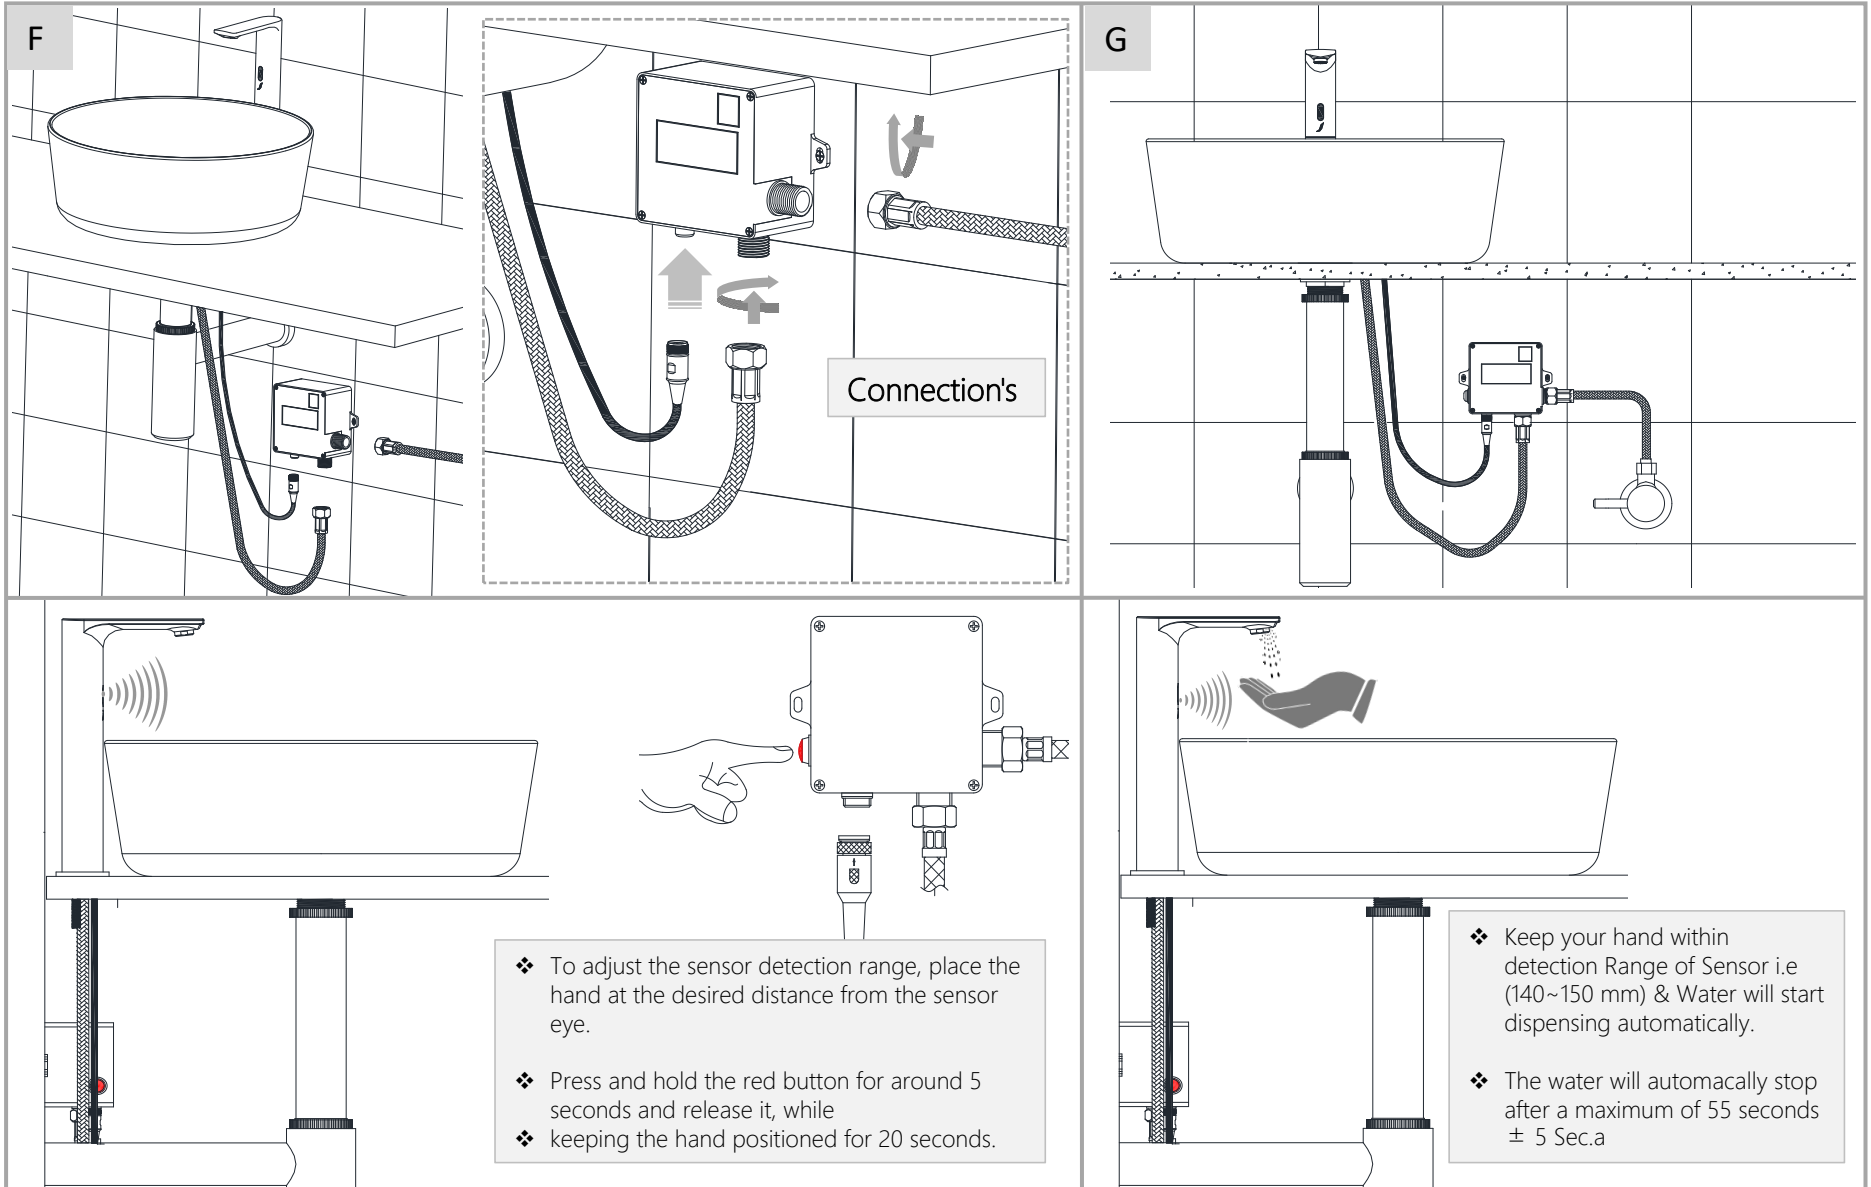


Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.




WITH PRE-MIX VALVE



INSTALLATION INCLUDING PRE-MIX VALVE

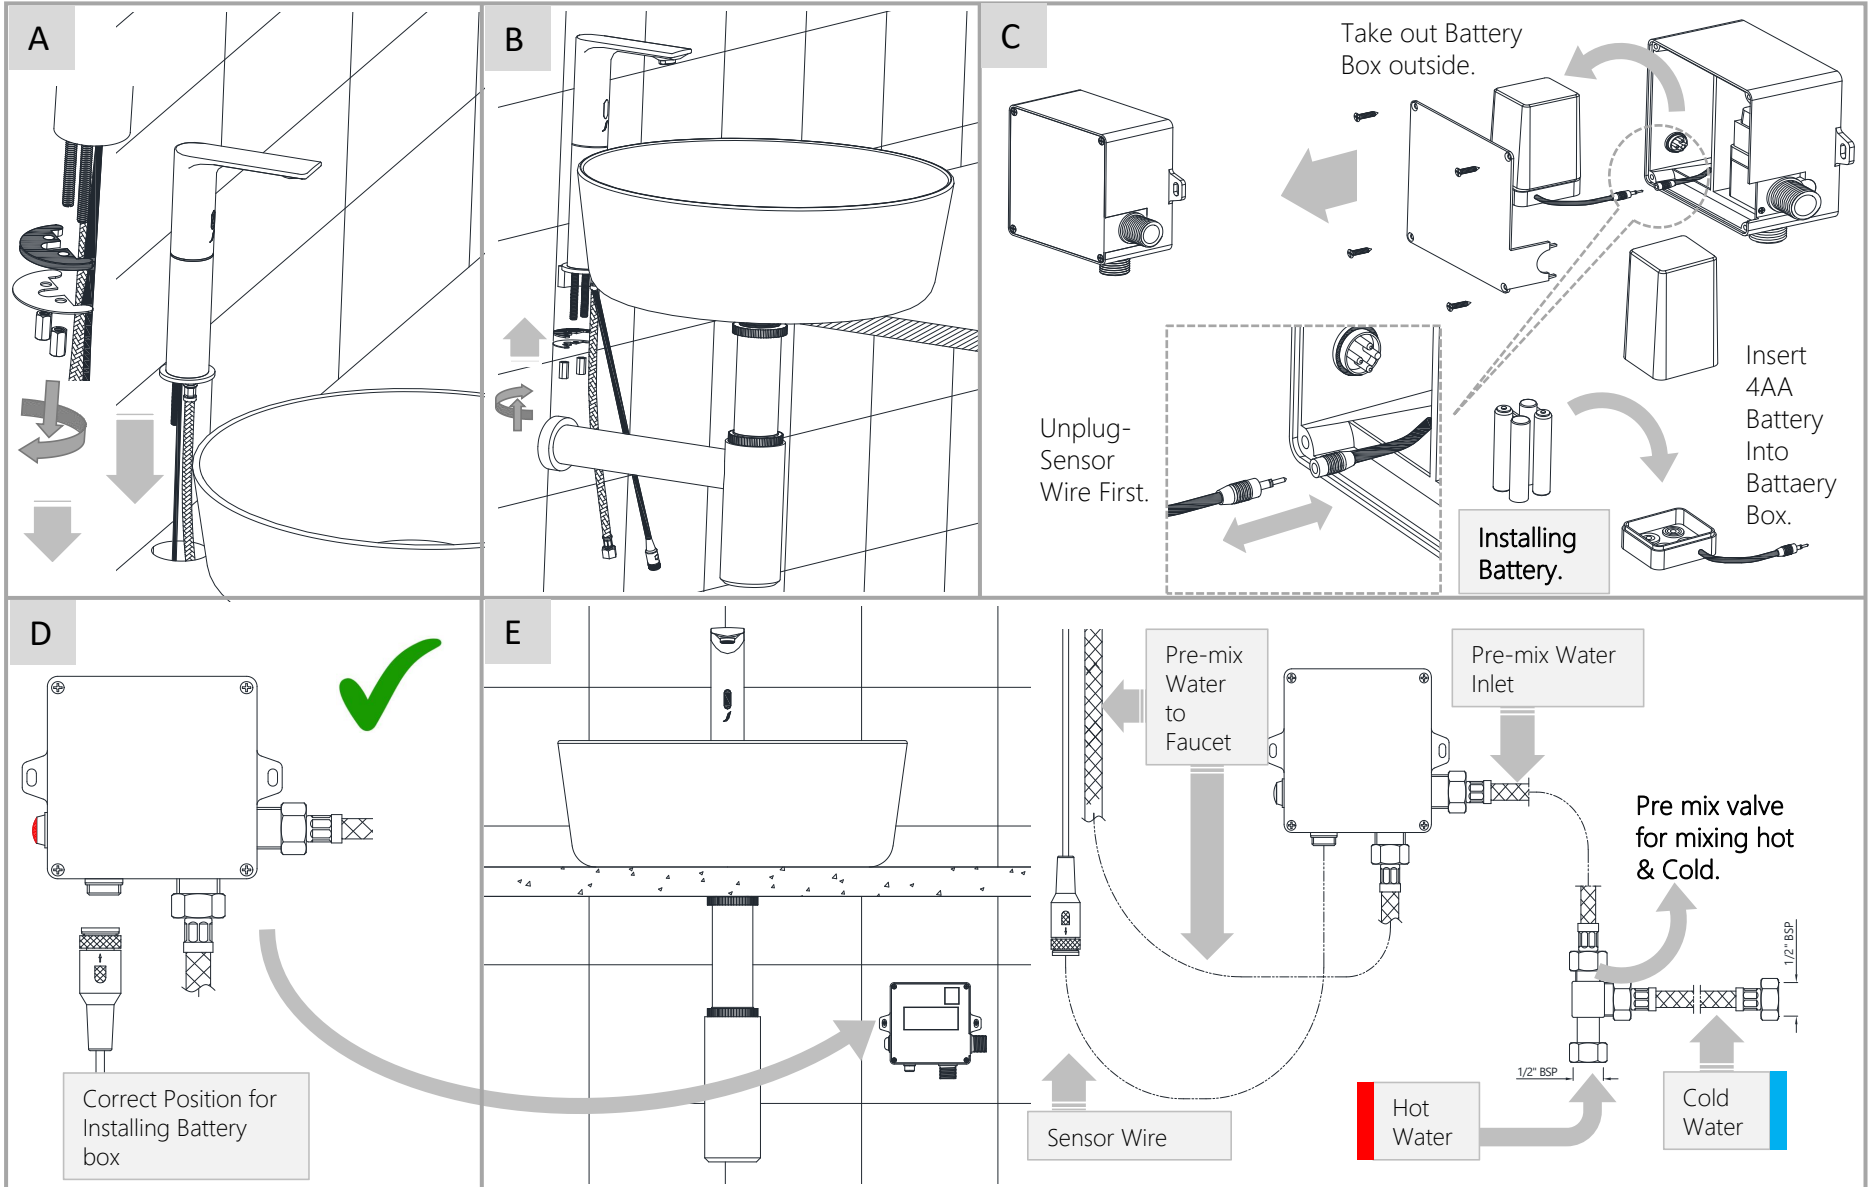


Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.

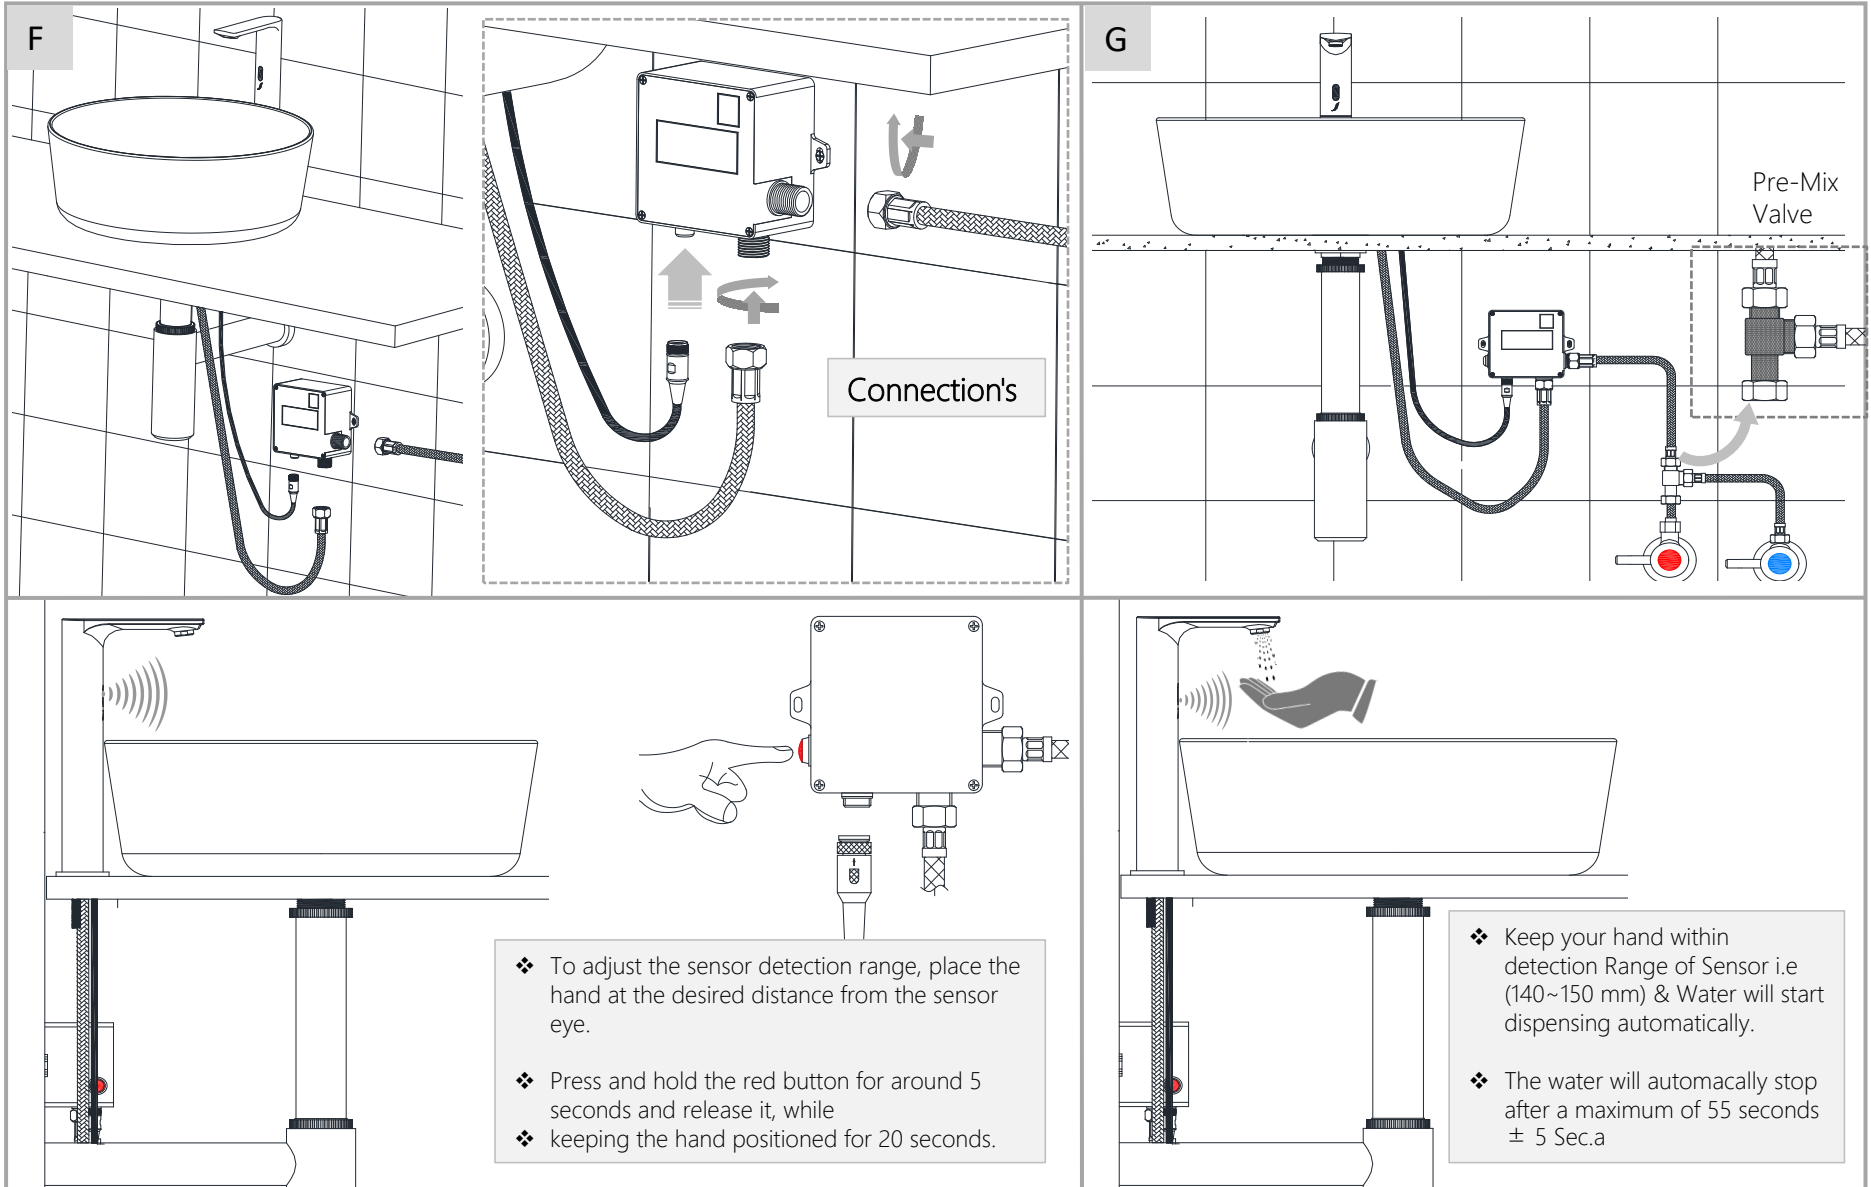

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.

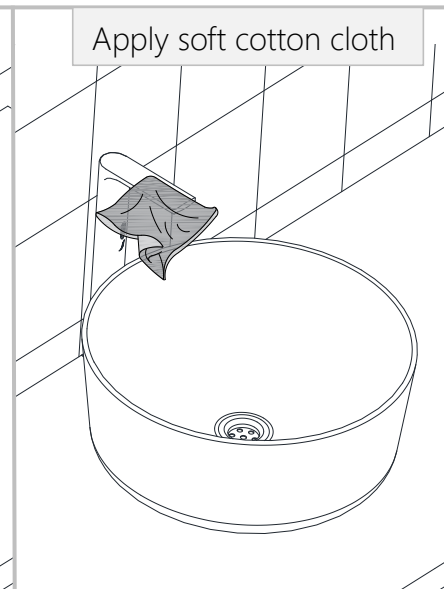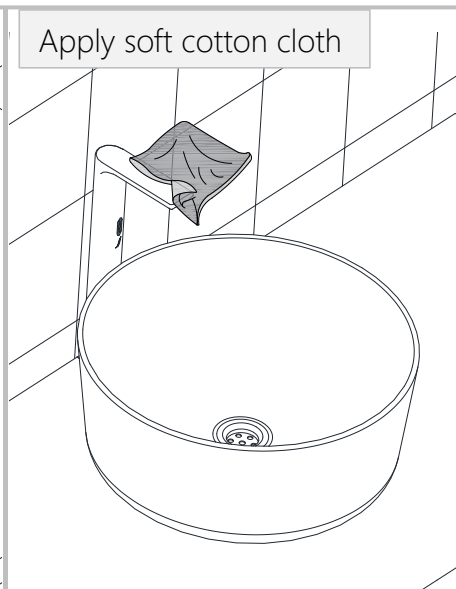

Steps & Cleaning agents requirements for Cleaning.

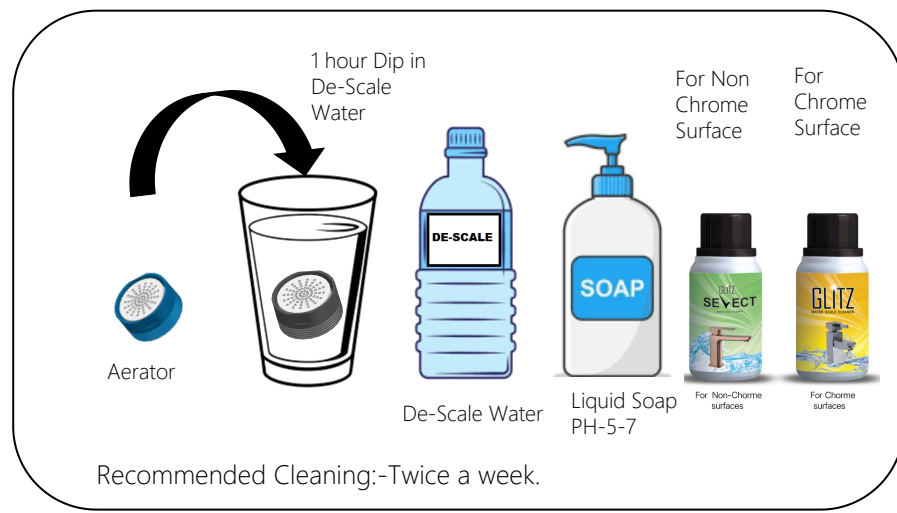

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FAUCET BATTERY OPERATED WITH & WITHOUT MIX VALVE.