


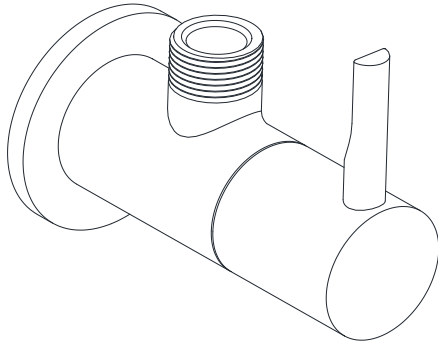

Angular Stop Cock



* Representative image


Temp & water pressure Requirement.


	Working Pressure: 1~3 bar
	Required Temperature: 5-65°C

- **Working Pressure:-** The water pressure should be Between 1 and 3 bar for proper functioning.
- **Required Temperature:-** The water temperature within the range of 5-65° for safe & effective use.
- **Note:-** These are recommended values for achieving conventional /Optimum output.

Guideline for Braided hose Installation


- Keep the hose straight as much as possible.
- Don't twist or bend hose during connection.
- Make sure hose is fully tighten to avoid any leakage.

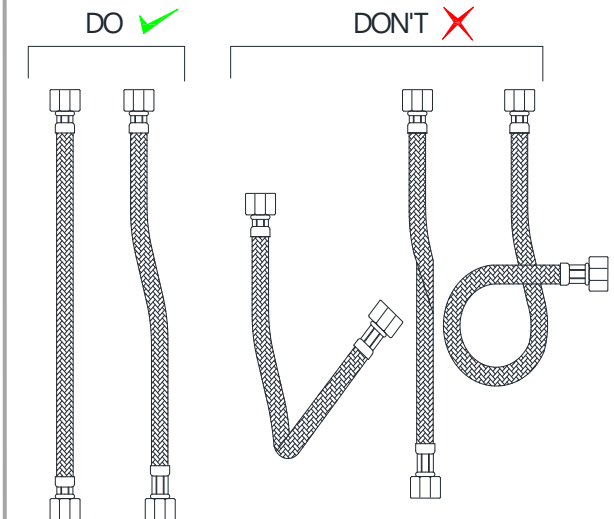

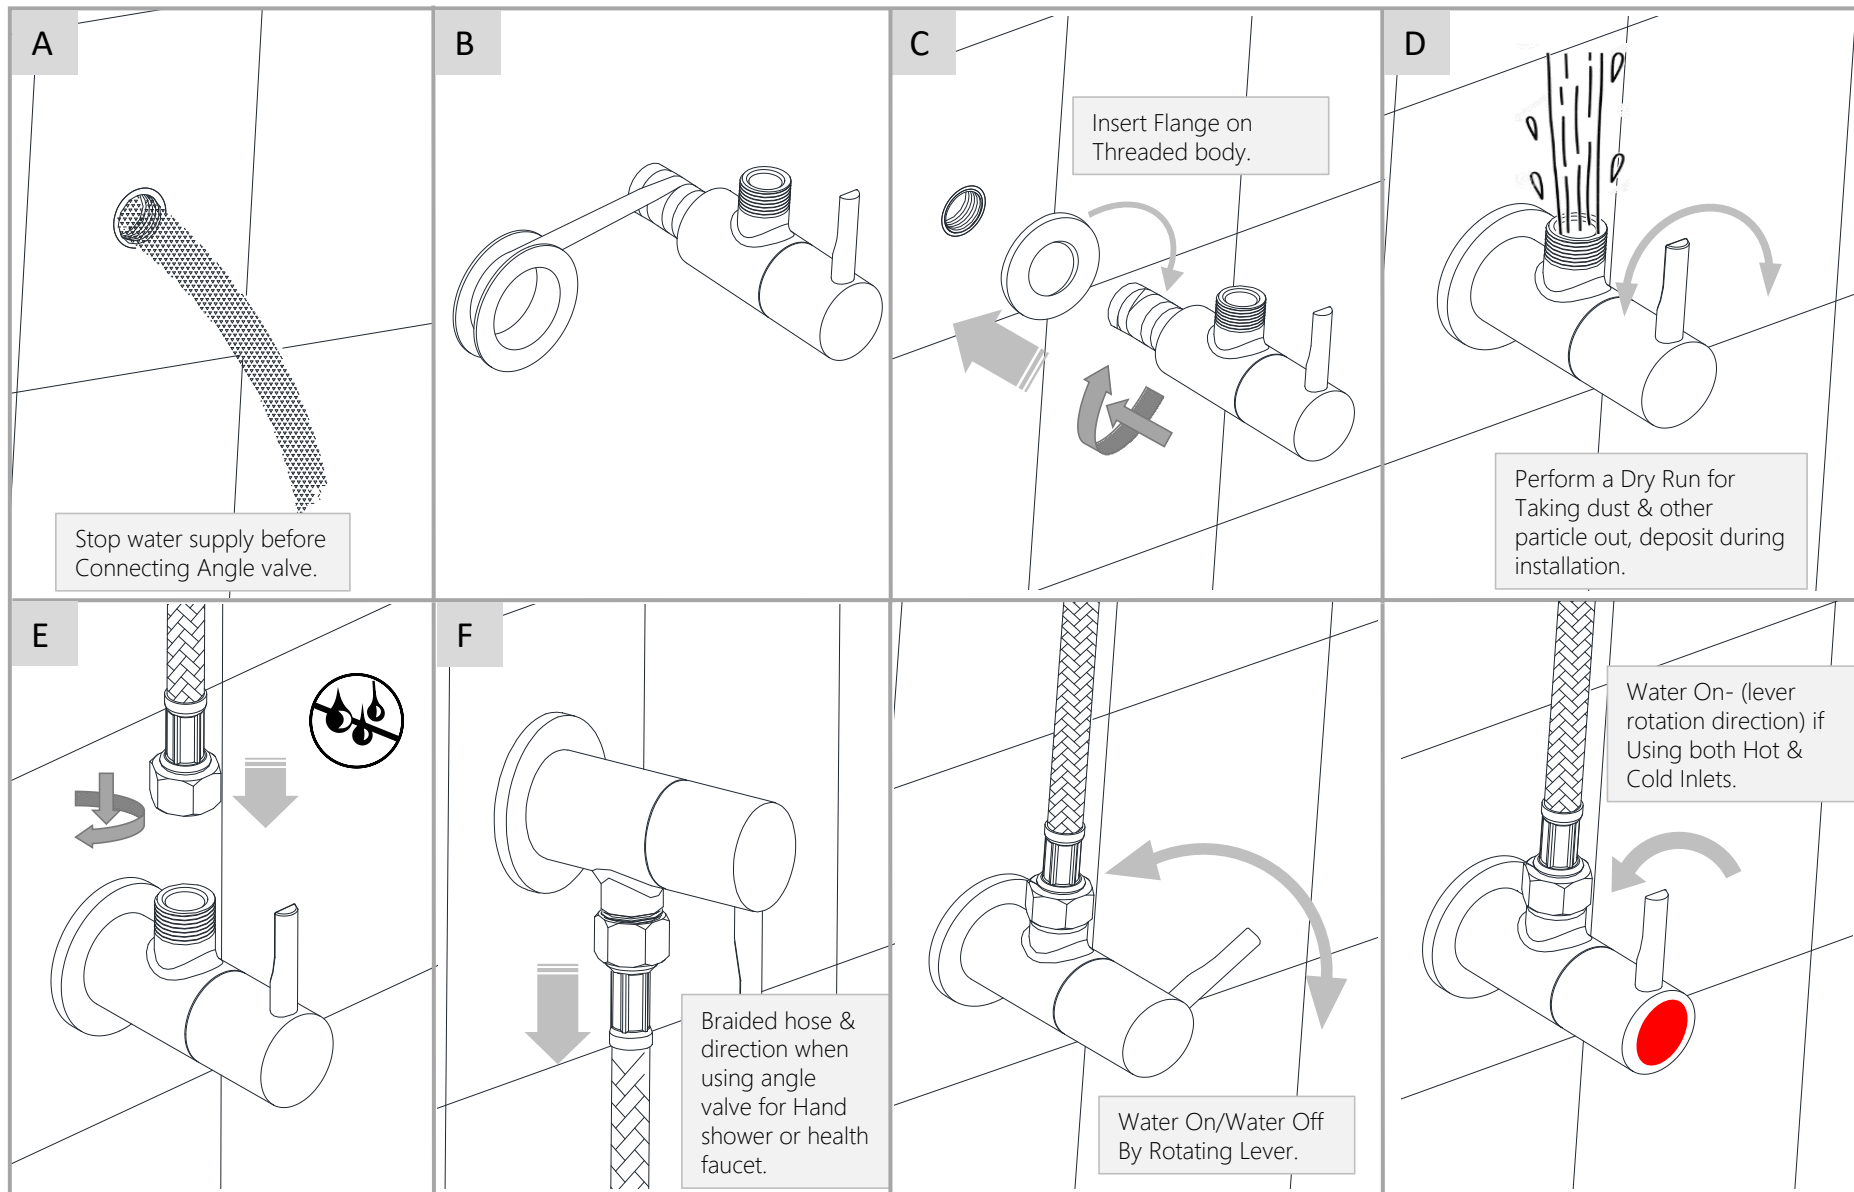


Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL ANGULAR STOP COCK.




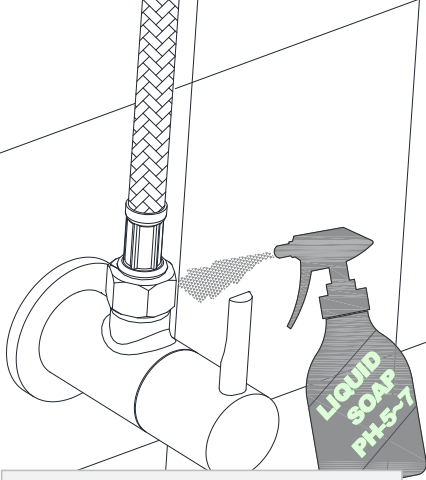


Note: Apply liquid soap pH-B/W 5~7 or Glitz .

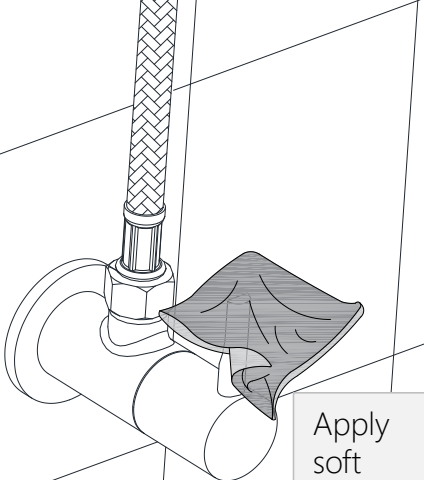


Apply soft cotton cloth

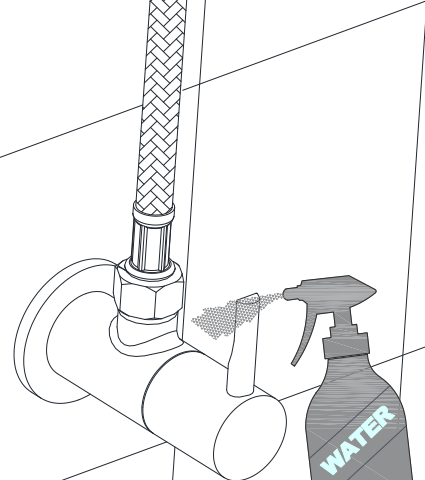

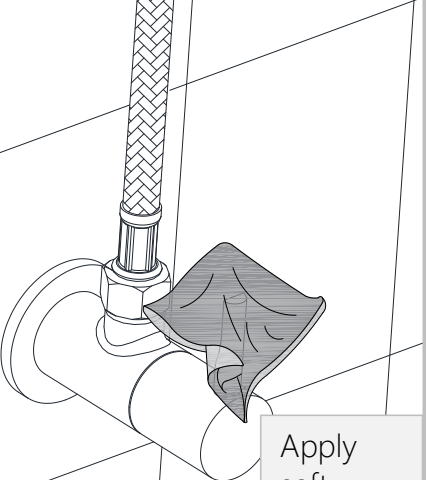

Apply soft cotton cloth

⊗ DON'T

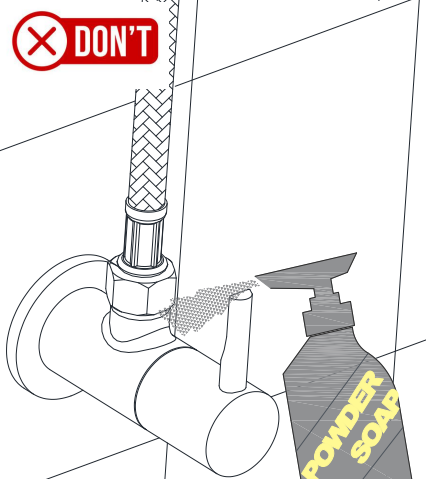

⊗ DON'T



Don't apply Scrub

Steps & Cleaning agents requirements for Cleaning.



Aerator



1 hour Dip in De-Scale Water



De-Scale Water



Liquid Soap PH-5-7



For Non-Chrome surfaces



For Chrome surfaces

Recommended Cleaning:- Twice a week.

Aerator cleaning is not applicable for this item.

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL ANGULAR STOP COCK.