




Sink Cock with Regular Swinging Spout (Wall Mounted Model)

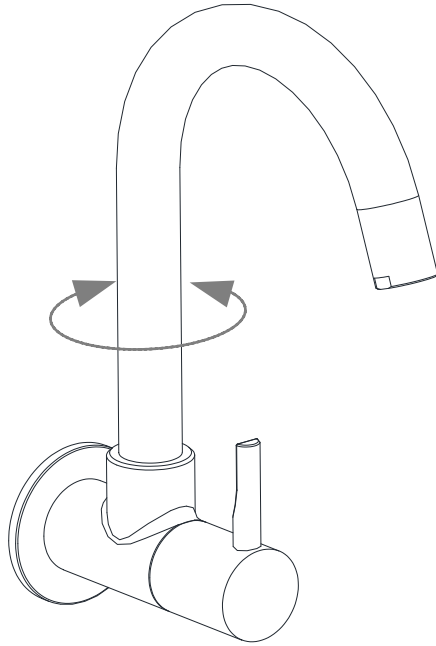


* Representative image

Temp & water pressure Requirement.

	Working Pressure: 1~3 bar
	Required Temperature: 5-65°C






- **Working Pressure:-**The water pressure should be Between 1 and 3 bar for proper functioning.
- **Required Temperature:-** The water temperature within the range of 5-65° for safe & effective use.
- **Note:-** These are recommended values for achieving conventional /Optimum output.

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINK COCK REGULAR SWINGING SPOUT WALL MOUNTED MODEL.

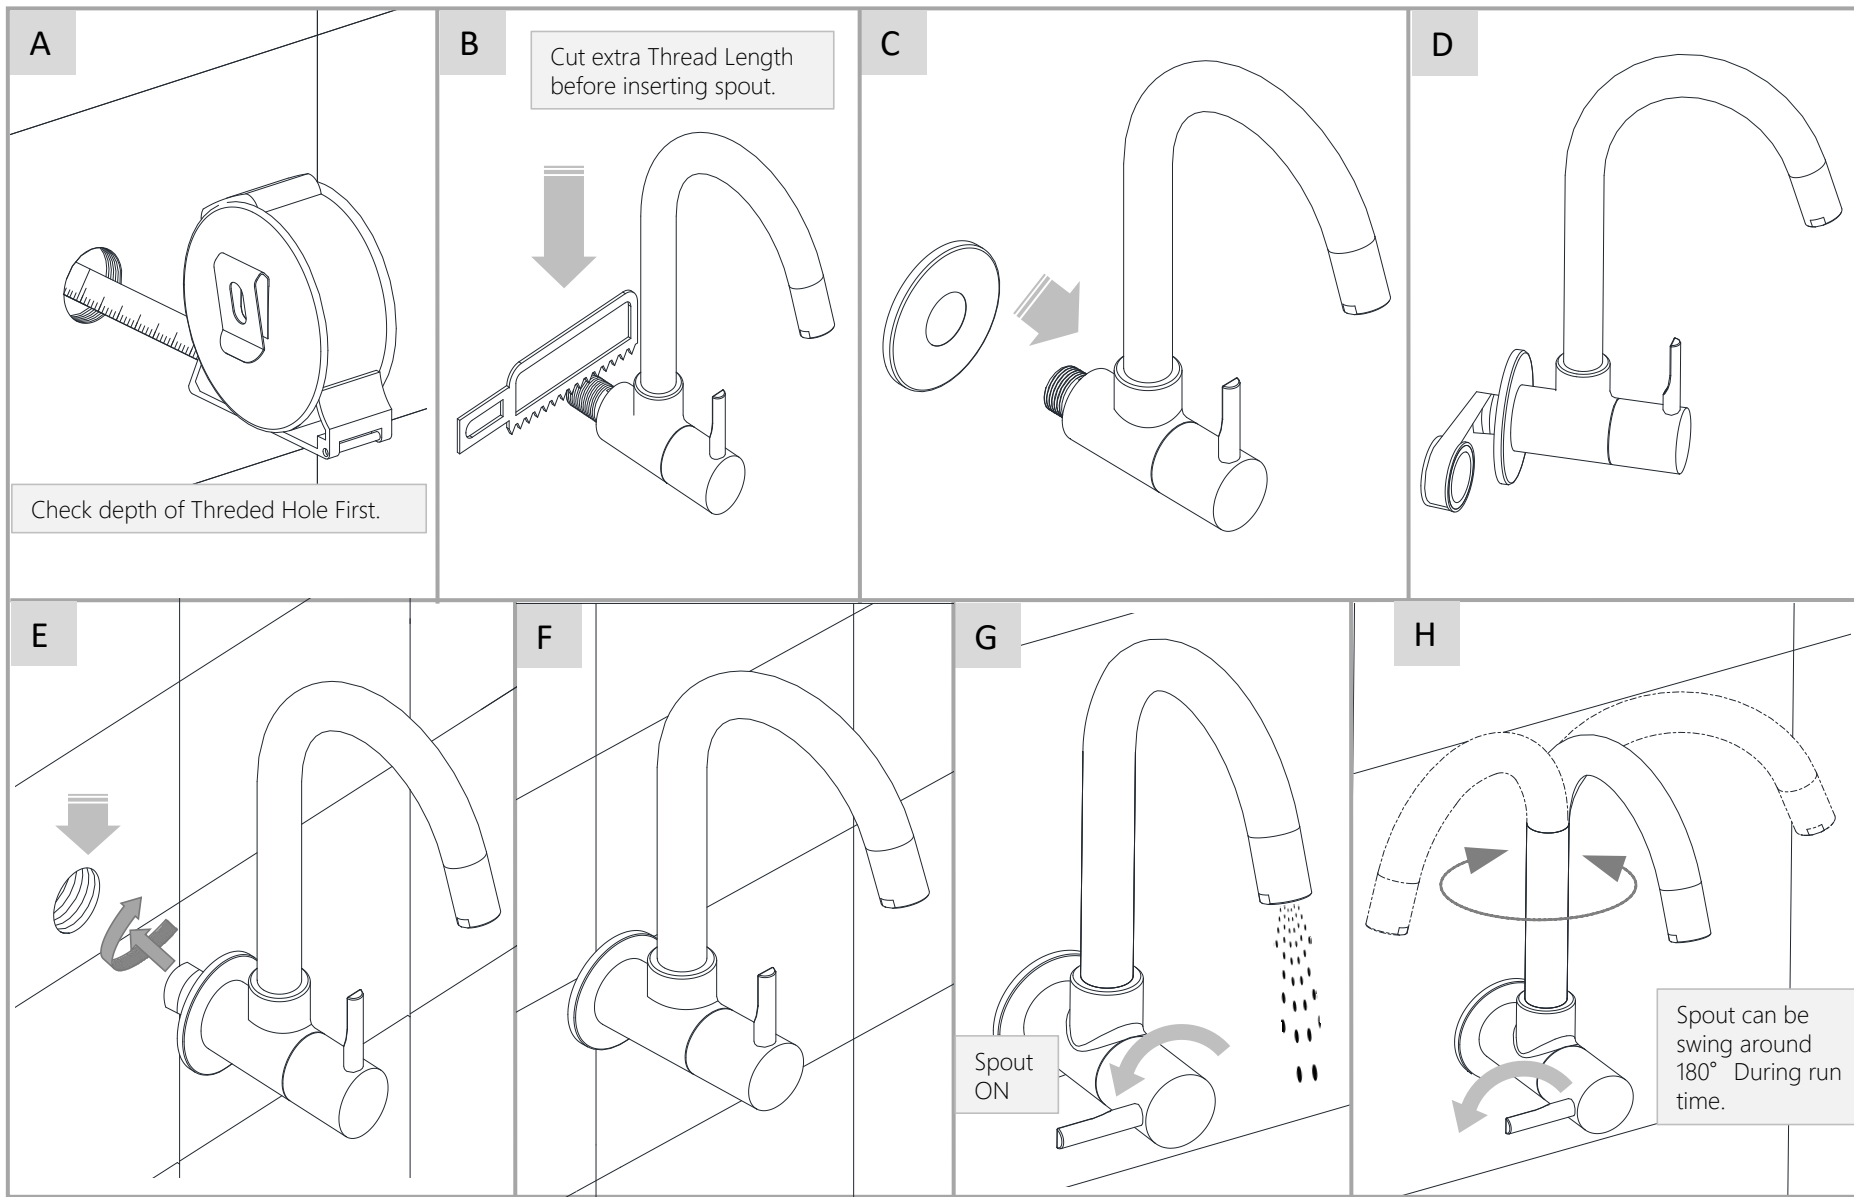

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINK COCK REGULAR SWINGING SPOUT WALL MOUNTED MODEL.

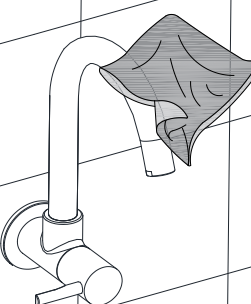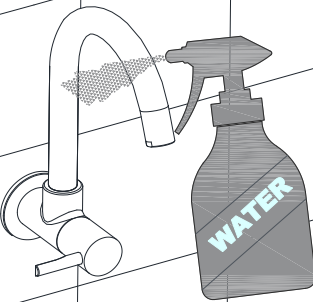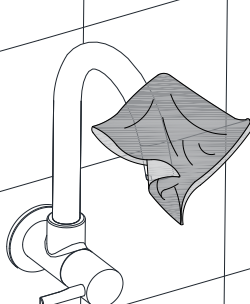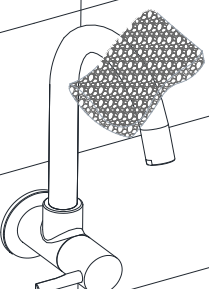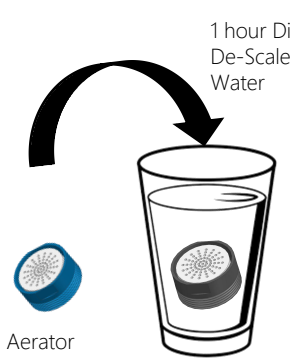

 Note: Apply liquid soap pH-B/W 5~7 or Glitz .	Apply soft cotton cloth 		Apply soft cotton cloth 
⊗ DON'T 	Don't apply Scrub ⊗ DON'T 	<u>Steps & Cleaning agents requirements for Cleaning.</u>  1 hour Dip in De-Scale Water  Aerator  De-Scale Water  Liquid Soap PH-5-7  For Non-Chrome Surfaces  For Chrome Surface Recommended Cleaning:- Twice a week.	

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINK COCK REGULAR SWINGING SPOUT WALL MOUNTED MODEL.