





INSTALLATION GUIDE

ALD-649C -Concealed Body of Thermostatic valve for Health Faucet

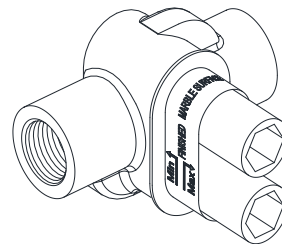


Requirements:-




- ◆ Teflon tape.
- ◆ Hot & cold water line BSPP 1/2"
- ◆ Wrench for fitting & tightening.

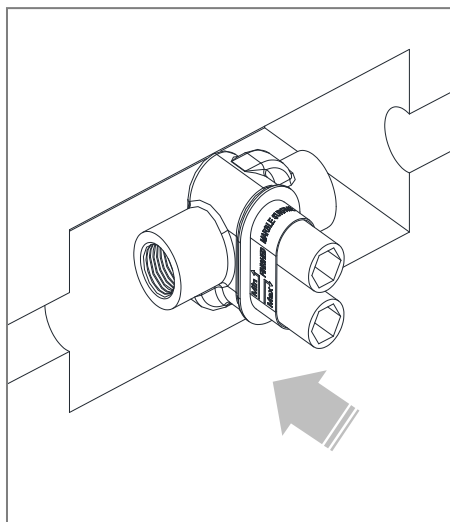

Add Teflon tape before Tightening.

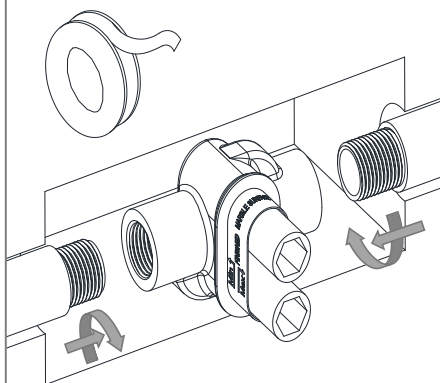

Turn on Water supply & check for Leakage.

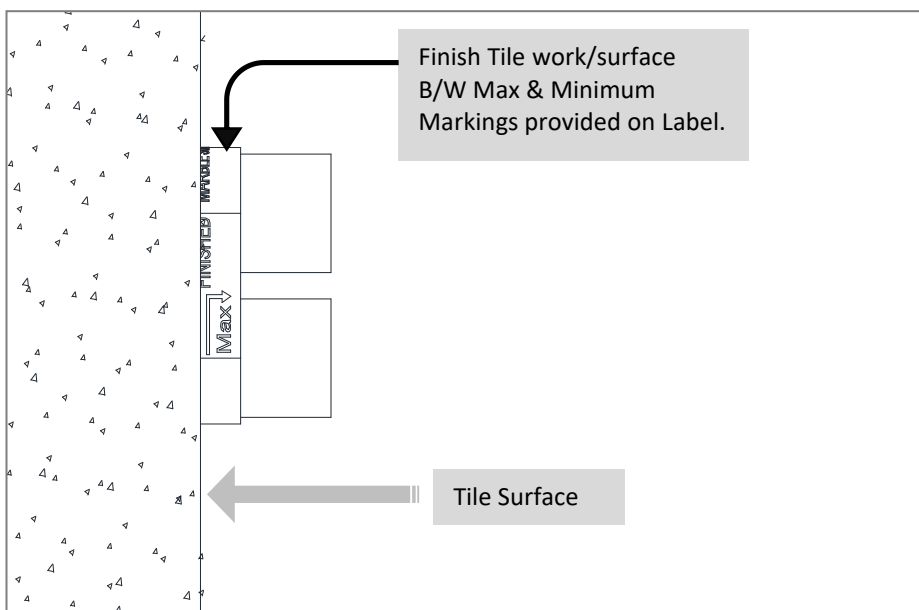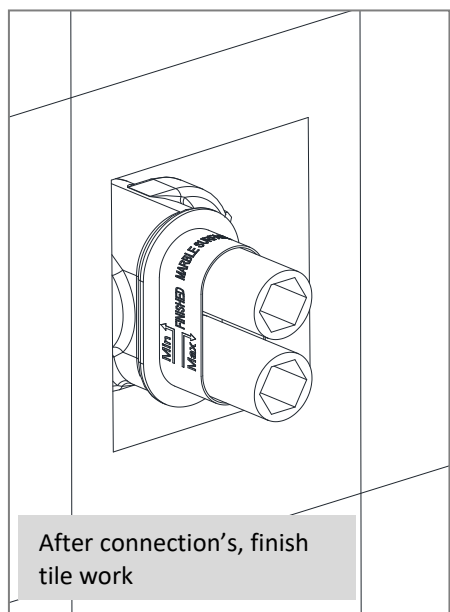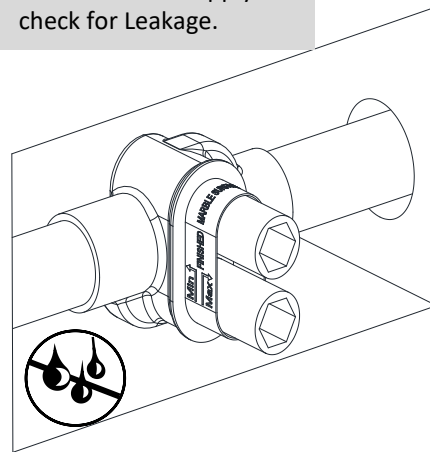

Safety Tips :-

- ❖ Make sure Tile surface is finished B/W Min & Max marking given on Label. Concealed body to be installed on reachable Height.
- ❖ Make sure no loose fitting:
- ❖ Avoid any leakage during connection.
- ❖ Don't connect pipes forcefully , can lead to damage concealed/pipe.