




INSTALLATION GUIDE

ALD-233NPSO

Requirements:-

- ◆ Teflon tape.
- ◆ Hot & cold water line BSPP 1/2"
- ◆ Wrench for fitting & tightening.


Concealed Body for Single Lever
Deutsch Mixer with Provision for
Connection to Overhead Shower
only But without Exposed Part

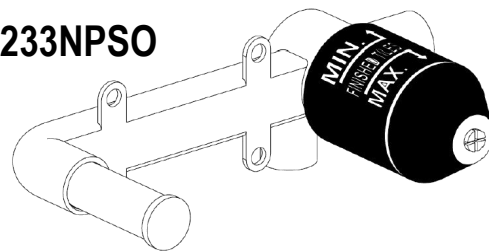


* Representative image

How to Install

1.

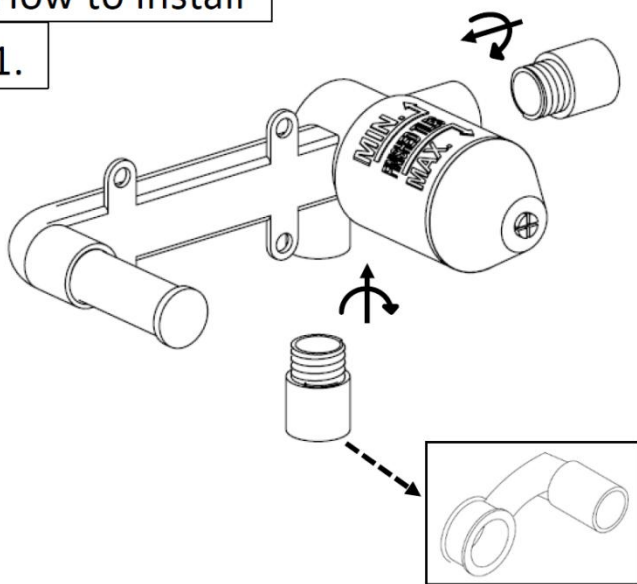


2.

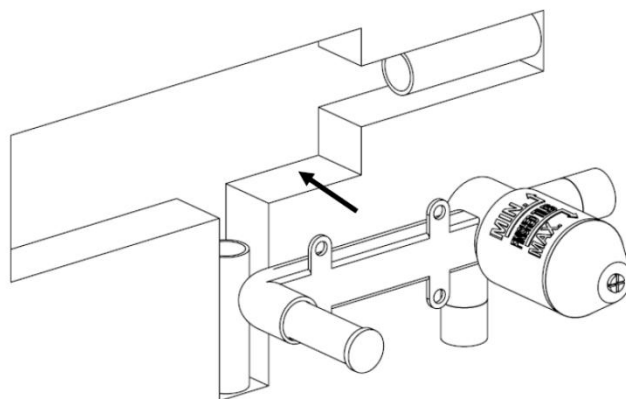


NOTE-
Turn Off the water supply.

3.

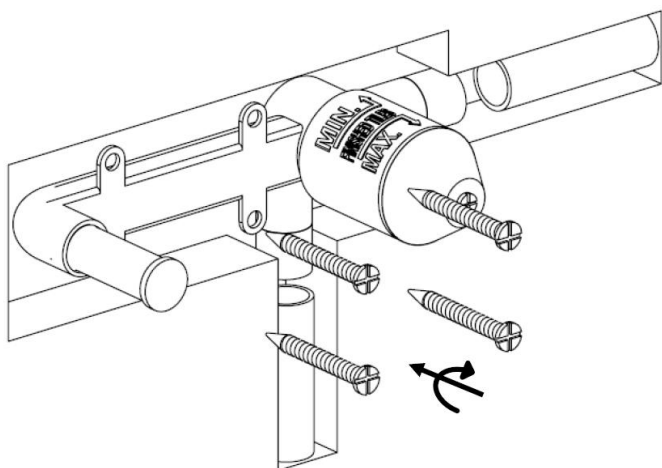


4.

Connect Water Inlets.

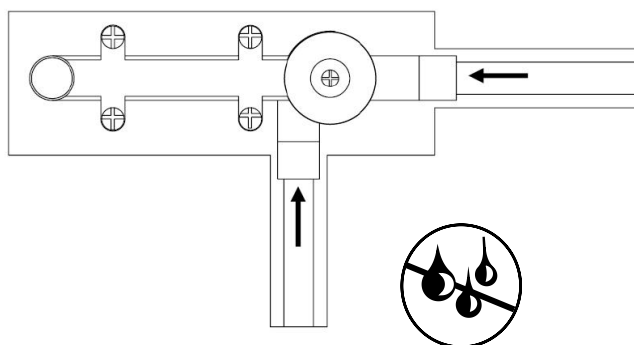

NOTE-
Turn On the water supply and check for
water leakage.

5.

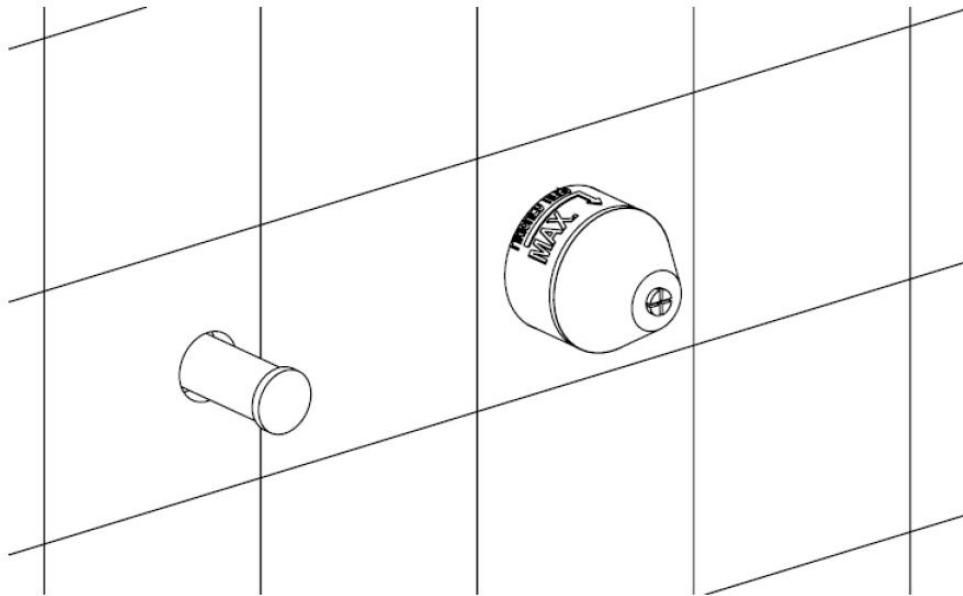

NOTE-

Finish the tiling work on the wall.

Safety Tips :-

- ❖ Make sure Tile surface is finished B/W Min & Max marking given on cover.
- ❖ Make sure no loose fitting:
- ❖ Use teflon tape before connecting water inlet pipes.
- ❖ Avoid any leakage during connection.

Note: THIS INSTALLATION METHOD CAN ALSO BE REFFERED FOR BELOW ITEM CODE.

ALD-CHR-233N