




INSTALLATION GUIDE

ALD-193

Requirements:-

- ◆ Teflon tape.
- ◆ Hot & cold water line BSPP 1/2"
- ◆ Wrench for fitting & tightening.


Concealed Body for 3-Inlet
Single Lever Diverter with
Button Assembly, But
without Exposed Parts

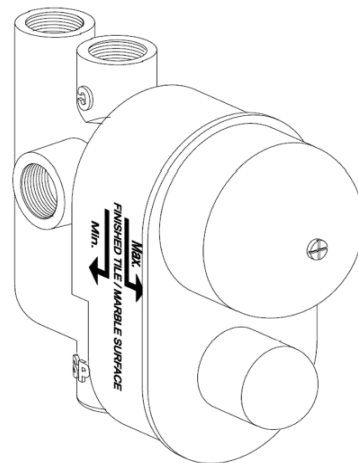


How to Install

1.


Add Teflon
tape
before
Tightening.

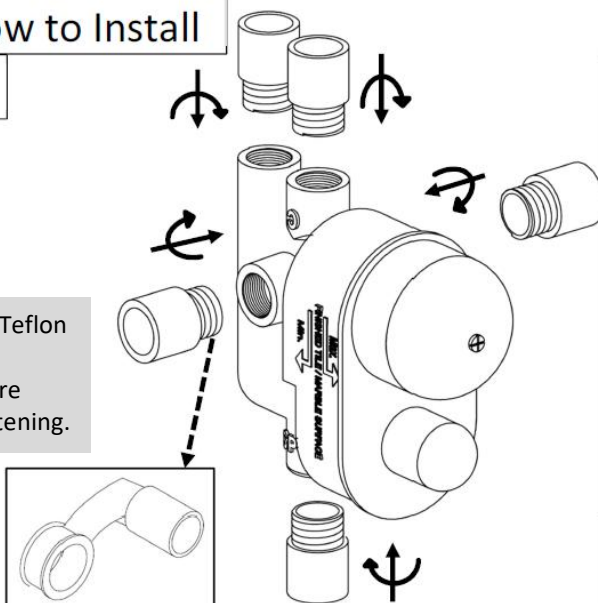


2.

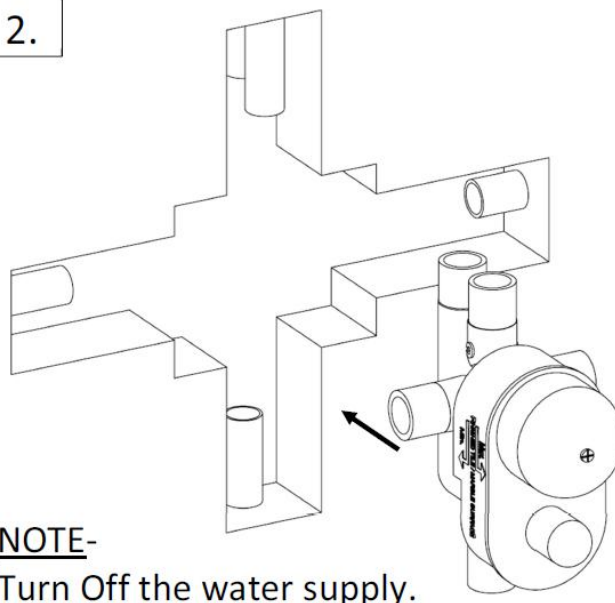

3.

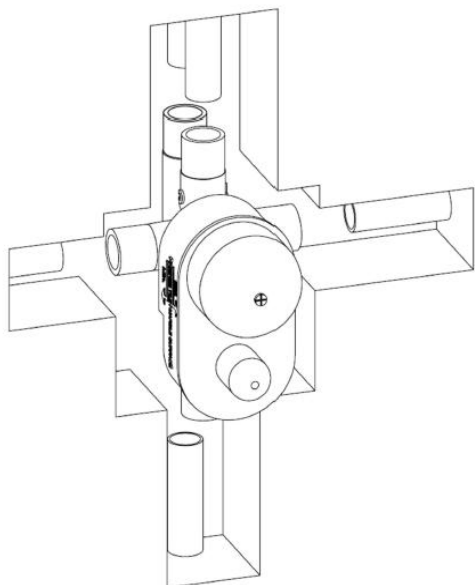


4.

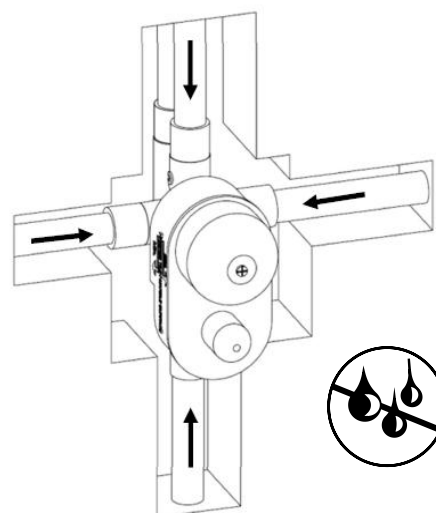

NOTE-
Turn On the water supply and check for
water leakage.

5.

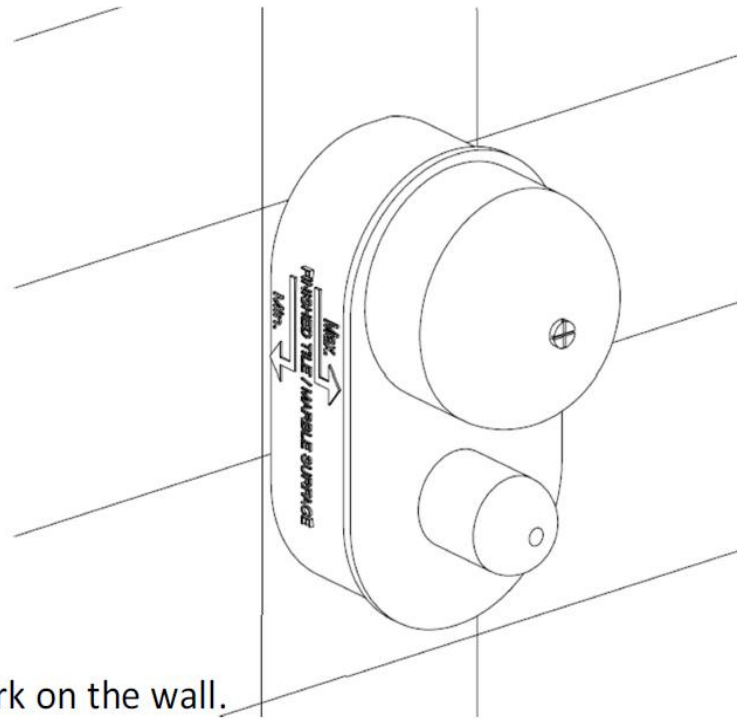

NOTE-

Finish the tiling work on the wall.

Safety Tips :-

- ❖ Make sure Tile surface is finished B/W Min & Max marking given on cover.
- ❖ Make sure no loose fitting:
- ❖ Avoid any leakage connection.