




INSTALLATION GUIDE

ALD-227

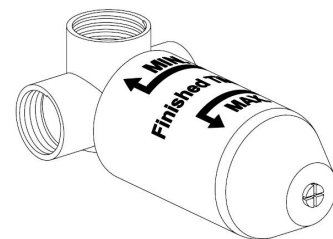


* Representative image


Requirements:-

- ◆ Teflon tape.
- ◆ Hot & cold water line BSPP 1/2"
- ◆ Wrench for fitting & tightening.



Concealed Body for Single Lever
Deutsch Mixer with Provision for
Connection to Overhead Shower
only But without Exposed Part

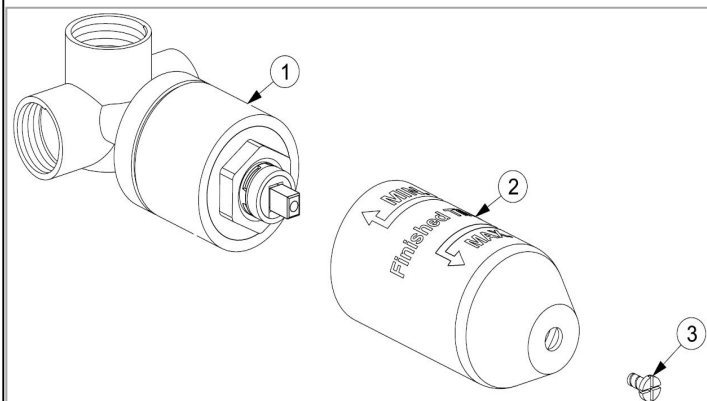


Add Teflon tape before lightning.

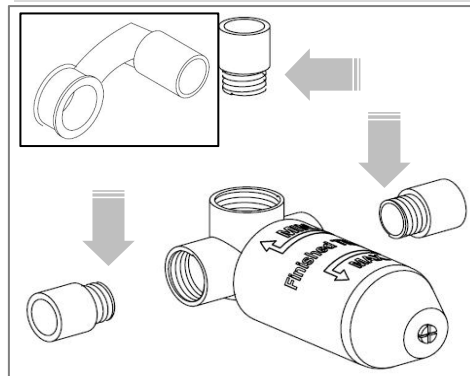


Turn off Water Supply during Connection.

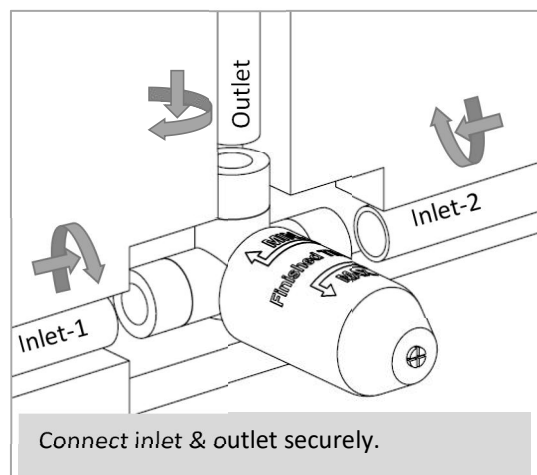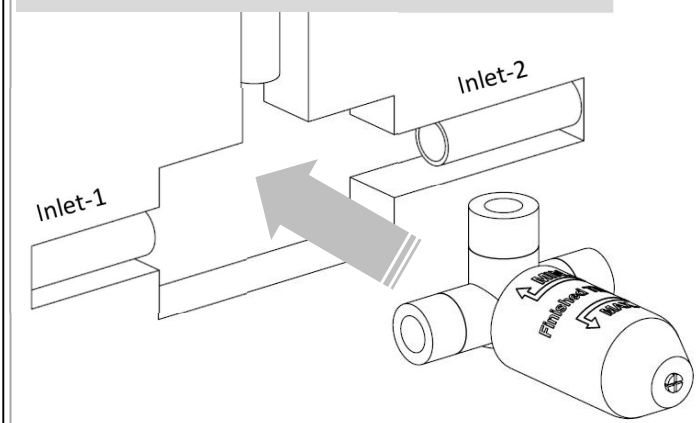

Connect inlet & outlet securely.

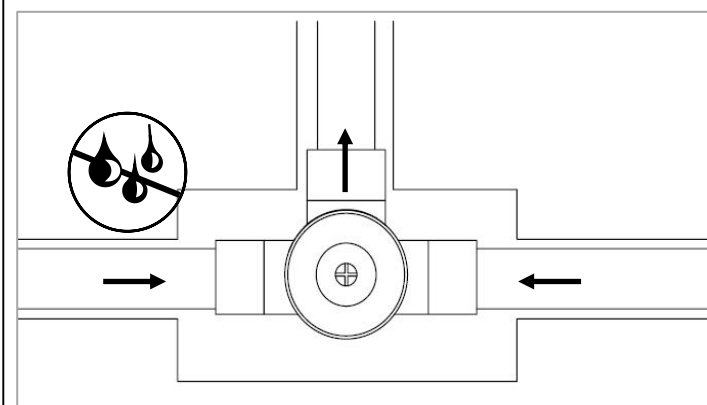

Make sure there is no Leakage..

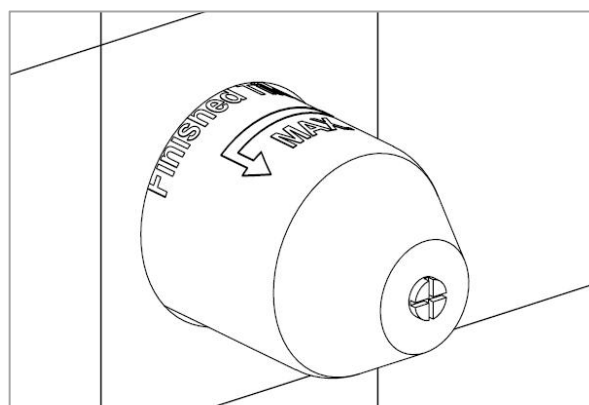

Finish Tile work B/W Max & Minimum Marking.

Safety Tips :-

- ❖ Make sure Tile surface is finished B/W Min & Max marking given on cover.
- ❖ Make sure no loose fitting:
- ❖ Avoid any leakage during connection.

Note: THIS INSTALLATION METHOD CAN ALSO BE REFFERED FOR ALD-139.