



INSTALLATION GUIDE

Octane Slider Overhead Shower Rectangular Shape TriFlow (Rain, Mist & Grain Spray) with Rubit Cleaning System



Requirements:-

- ◆ Water connection with ideal water pressure from 1 to 3 bar
- ◆ Wrench for fitting & tightening if required.

INSTALLATION AND OPERATION MANUAL

INDEX

- ❖ Requirements
- ❖ Installation
 - Pre-installation
 - Installation
- ❖ Maintenance & Trouble Shooting

Requirements

1. Pressure: - ideal water pressure is 1 to 3 bar
2. Inlet Supply:- BSPP/ G1/2"
3. Operation:- Rain, Mist & Grain spray

NOTE:

- 1) In Air Effect Shower it's mandatory to use flow restrictor above 1.5 bar water Pressure
- 2) Please shut off the inlet supply after the use of Douche

Installation Guidelines

Pre-installation

Make the inlet supply to the Shower/Douche Shower free from any foreign particle (dirt, debris, etc.) which may affect the functioning of the product by completely flushing the pipeline.

Installation

1. Stop the water supply before installing the Shower/Douche Shower.
2. Connect outlet supply line to the inlet of the Shower/Douche Shower.
3. Open the water supply to check the functions.

Maintenance

Following the below guidelines may be helpful in preserving the look of your newly acquired Shower/Douche Shower...

1. Chrome surfaces may get damaged by acids, detergents, disinfectants, metallic cleaning pads.
2. For lime scale or stain removal usage of 'GLITZ' cleaning solution' is beneficial.
3. Cleaning of Shower nozzles/Holes once in a while is helpful in retaining smooth flow of water.

Troubleshooting


1) Flow related

- | | |
|---------|---|
| Problem | : - Reduced Water Flow |
| Cause | : - Blocked Shower Nozzles/Inlet/Douche Shower's holes |
| Remedy | : - Clean the Shower Nozzles/Inlet/Douche Shower's holes it can be easily rubbed off by hand or flannel |

2) Leakage

- | | |
|---------|---|
| Problem | : - Water Leakage |
| Cause | : - Damaged/Broken/Worn out Washer |
| Remedy | : - Remove & Replace the defective Washer |

Slide Knob for switching into different showering mode like Rain mist & Grain spray.

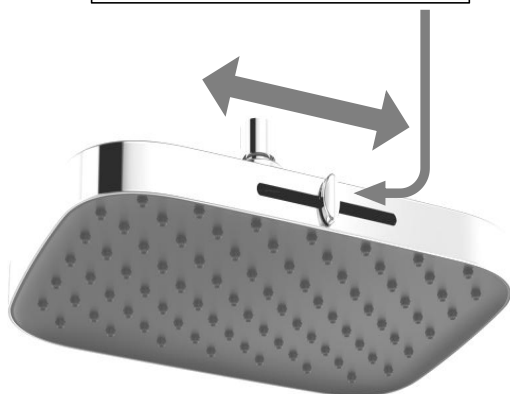

Recommended Cleaning Method:-



Rubit Cleaning

In this Method just take a soft sponge & wipe the face of shower.

Don't use any hard power soap or bristle sponge.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



**RECOMMENDED CLEANING:-
TWICE IN WEEK.**

**NOTE: THIS INSTALLATION SHEET CAN BE REFERRED FOR OCATNE OVER HEAD SHOWER
SLIDER KNOB TYPE WITH CONNECTION SIZE OF BSPP 1/2"**