






INSTALLATION GUIDE

Note: THIS INSTALLATION MANUAL CAN BE REFFERED FOR FLEXIBLE HOSE.

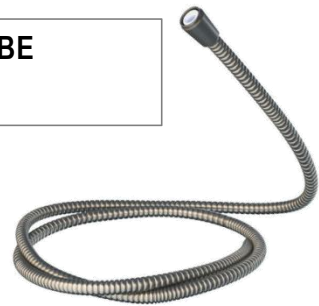

Requirements:-

- ◆ Angular stop cock live connection, 1/2 BSPP sizes.
- ◆ Wrench for fitting & tightening.
- ◆ Health faucet/ Hand shower
- ◆ Ideal water Pressure 1~3 bar

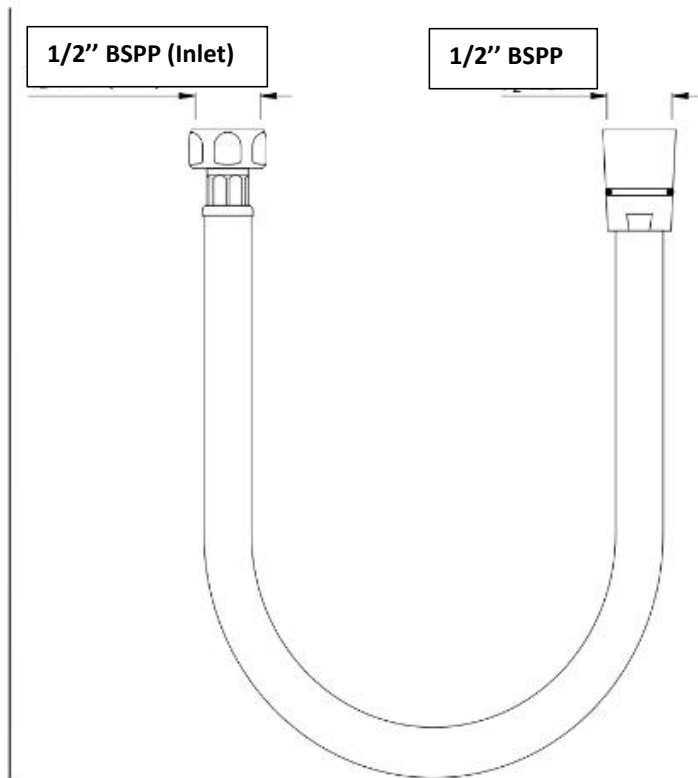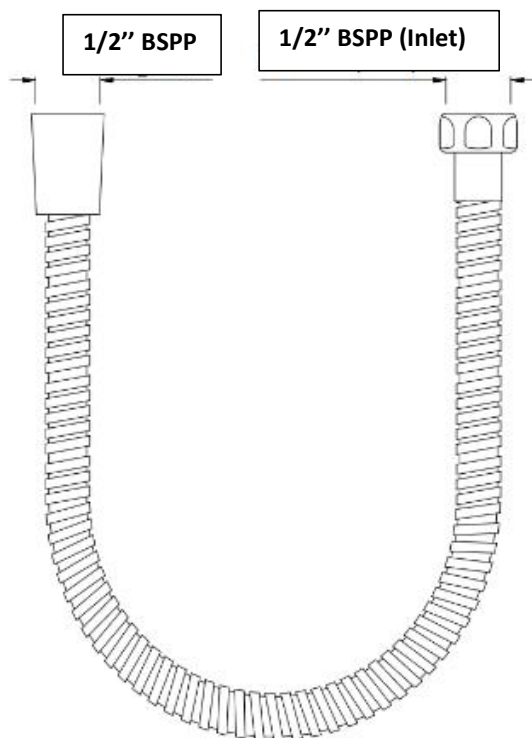

If you are the using flexible tube with health faucet or shutoff then we advice you to shut off the water supply to the tube for longer life.

INSTALLATION GUIDELINES


PRE-INSTALLATION

- 1) Separate all the contents from the packaging and inspect the product for transport damages. After it has been installed, no transport or surface damage will be honored.
- 2) Flush water supply lines thoroughly before installing the flexible tube. Don't allow dirt, Teflon tape or metal particles to enter the the faucet.

INSTALLATION

- 1) Stop the water supply before installing the flexible tube.
- 2) Connect inlet of the flexible tube to the inlet supply as well as connect other end (taper Side) with the outlet and tighten it firmly.
- 3) Open the water supply to check the functions.

Example for Connection:-

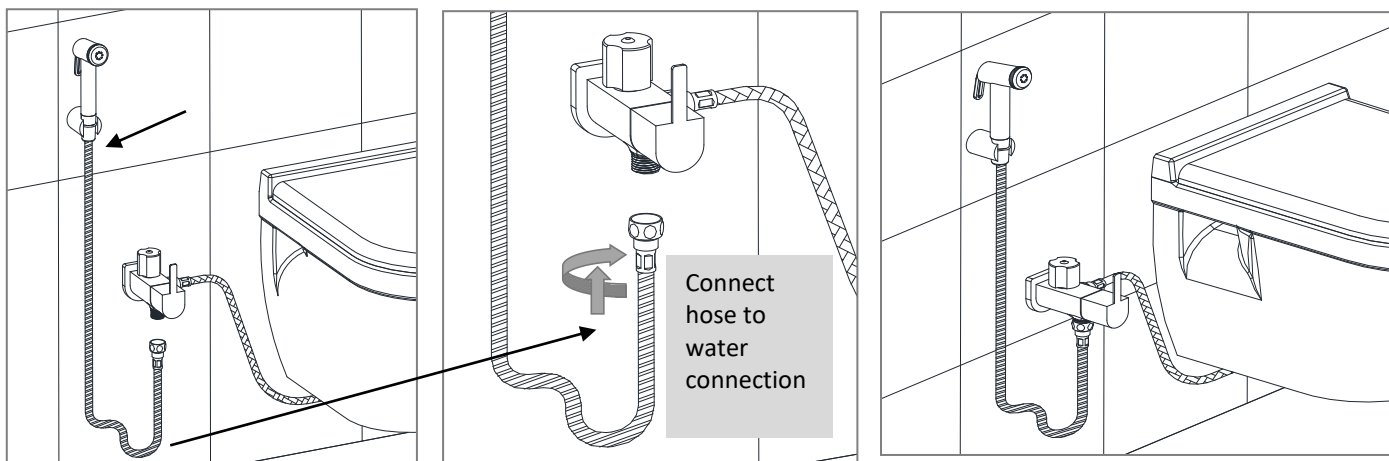

Safety Tips & Cleaning instruction.

- ❖ Make sure no loose fitting:
- ❖ Avoid any leakage during connection.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Use soft water & wipe up with soft cotton cloth.

Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap solution with a neutral pH (around 7).

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish

For Non
Chrome
Surface

For
Chrome
Surface



Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR FLEXIBLE HOSE.