



INSTALLATION GUIDE



Requirements:-


- ◆ Wrench for fitting & tightening.
- ◆ Teflon tape

Note: THIS INSTALLATION METHOD CAN BE REFERRED FOR ALL SHOWER ARM WITH CONNECTION SIZE BSPP 1/2"


* Representative image

HOW TO INSTALL


A

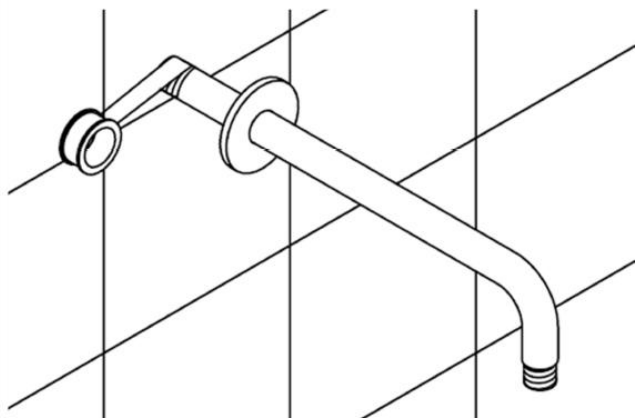


B

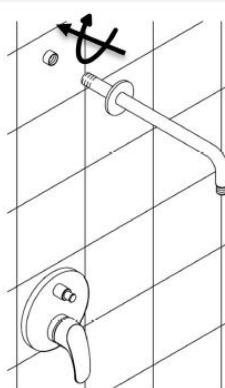


C

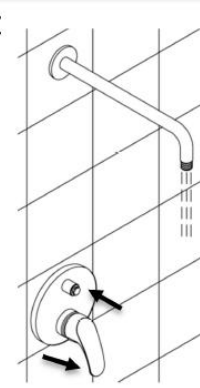


D

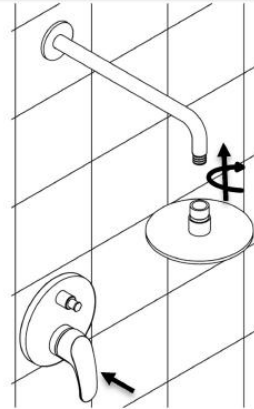

E

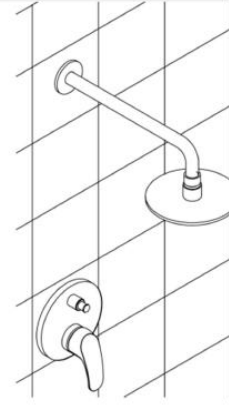

A

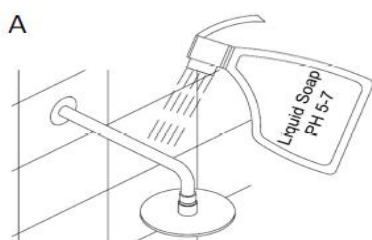

B Wet Cotton Cloth





G





D

Dry Cotton Cloth

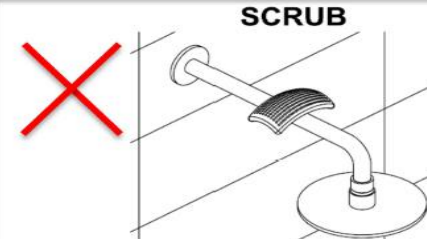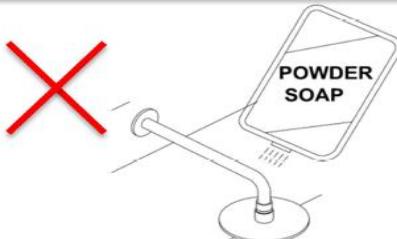

SCRUB

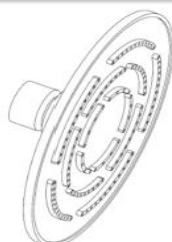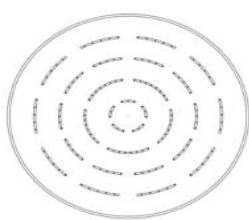

Rubit Cleaning



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap. This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting. This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



**Recommended Cleaning:-
Twice in a Week.**

Note: THIS INSTALLATION METHOD CAN BE REFERRED FOR ALL SHOWER ARM WITH CONNECTION SIZE BSPP 1/2"