












## INSTALLATION GUIDE

### Requirements:-

- ◆ Pencil for marking, Measuring tape, Teflon Tape.
- ◆ Allen key for screw tightening (Included in box)
- ◆ Hand shower with hose Pipe (for connection)

**Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR WALL OUTLET WITH PROVISION OF PLACING HAND SHOWER.**

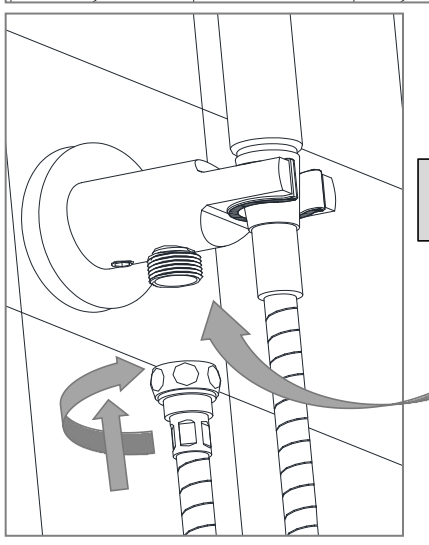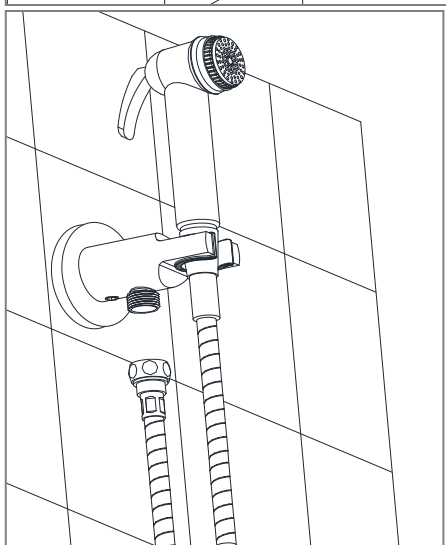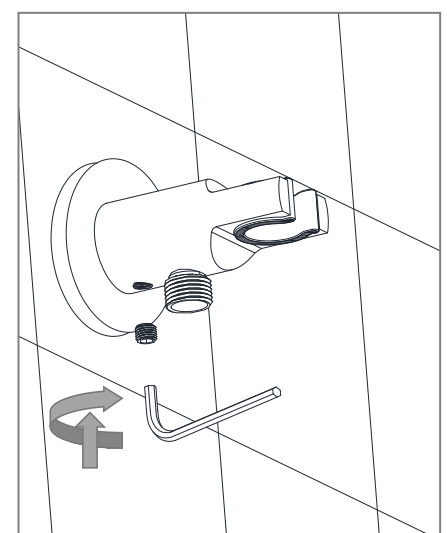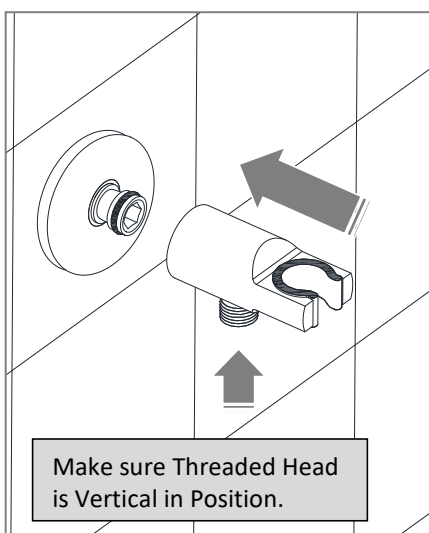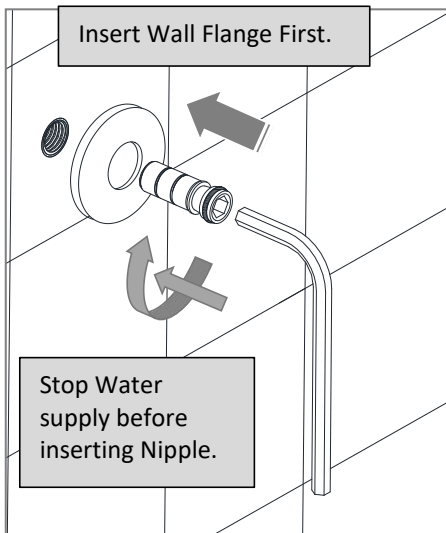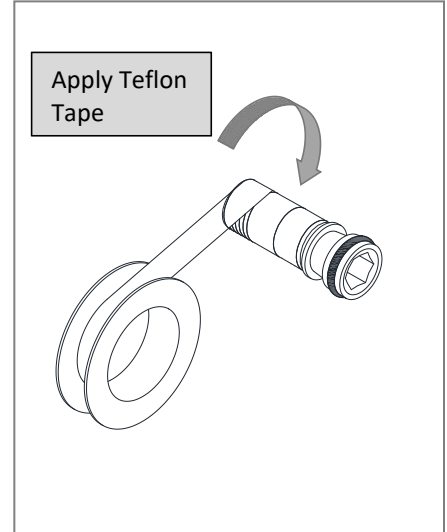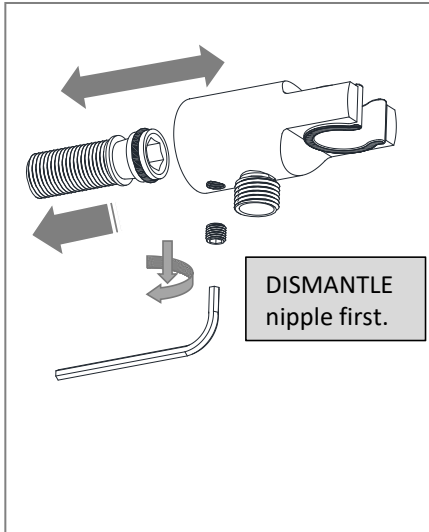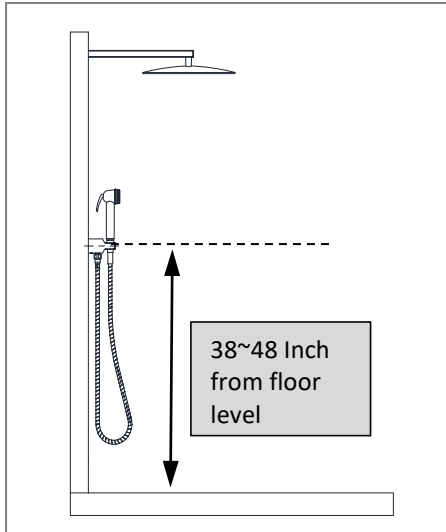

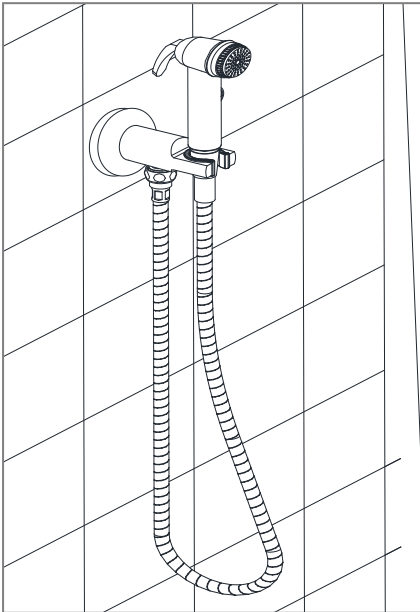

## Safety Tips:-

- ❖ Tighten any loose screws or hardware.
- ❖ Make sure Bracket is mounted at reachable height.
- ❖ Use proper eyewear while perform drilling work.
- ❖ Avoid any leakage during connection.
- ❖ Place the Item at Reachable Height.
- ❖ Use soft Hammer to avoid damage.



### Correct Cleaning Steps:

#### 1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

#### 2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

#### 3. Rinse with Water:

Spray clean water on the fitting after wiping with soap. This helps remove any soap residue.

#### 4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting. This ensures no water spots are left.

#### ✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non  
Chrome  
Surface



For  
Chrome  
Surface



**Note: THIS INSTALLATION MANUAL CAN BE REFFERED FOR WALL OUTLET WITH PROVISION OF PLACING HAND SHOWER.**