


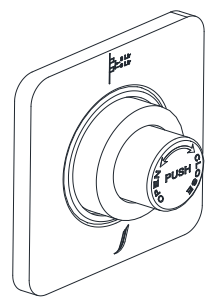

INSTALLATION GUIDE

NOTE: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL METROPOLE FLUSH VALVE DUAL FLOW WITH EXPOSED SHUT OFF PROVISION.



Requirements:-

- ◆ Pencil for marking, Screw driver, Teflon Tape.
- ◆ Inlet pipe connection 1-1/4" BSPP (32mm) & Outlet 1-1/4" BSPP (32mm)

01

Remove cap

02

Apply Teflon tape here.

03

Water Inlet pipe

Add threaded Nipple for pipe connection.

Pipe to WC/Urinal-pot

04

Finish Wall Surface


MAX SURFACE

05

Take cover Out

Make sure to fit O-ring First.



Gently slide the Flange on Push button assembly.

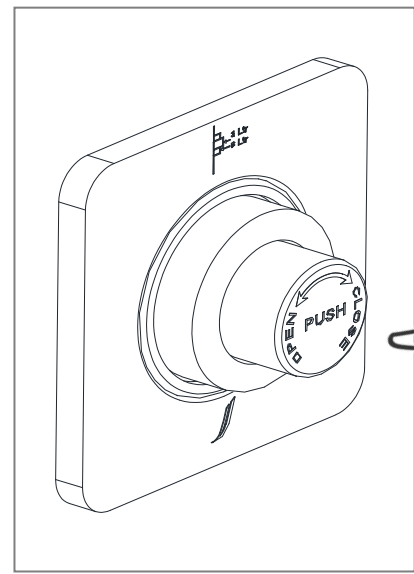

PUSH BUTTON FUNCTION


Requirements/Conditions		
	1085N / 1095N / 1085SQN / 1095SQN	1089N / 1093N / 1089SQN / 1093SQN
Pressure	1 – 4 bar	0.50 – 2 bar
Inlet	1-1/4" BSPP 32mm	1-1/2" BSPP 40mm
Outlet (Connecting sleeve)	1-1/4" BSPP 32mm	1-1/4" BSPP 32mm
Installation	Concealed wall mounted	
Operation	Concealed wall mounted Hydro-mechanical activation	

How to operate:-

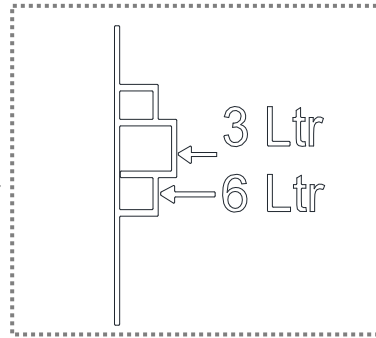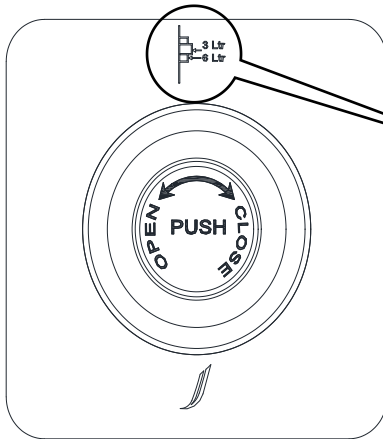


This flush valve having 2 flushing modes 3 & 6 litre,


Half flush for Less water & full flush is for more water required, both condition's is shown below.

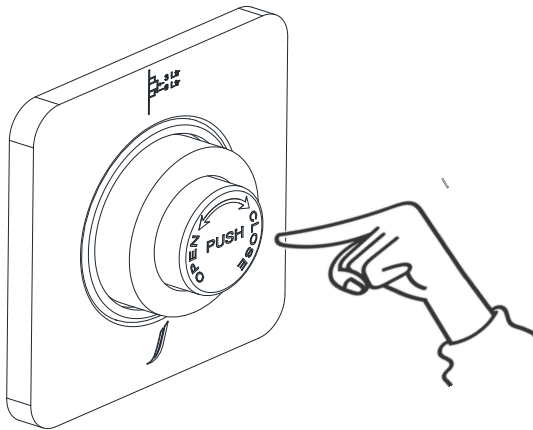

Half Flush :- When less water required (Approx 3 litre)

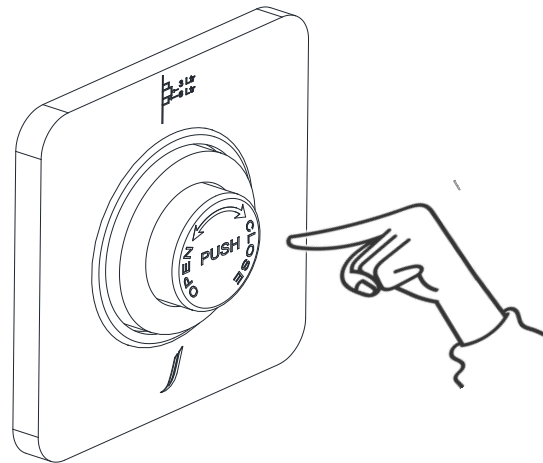

Full Flush :- When More water required (Approx 6 litre)

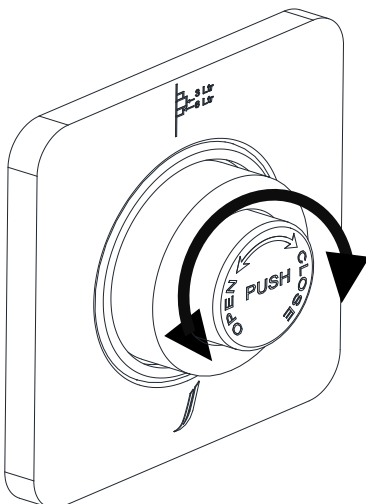

Push & Rotate Clockwise to Turn Off & Anti-clock wise to OPEN.

Safety Tips & Cleaning instruction.

- ❖ Make sure no loose fitting, Check for Leakage before final fittings.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Use soft water & wipe up with soft cotton cloth.
- ❖ Don't push fittings forcefully, can lead to damage or crack.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



**Recommended Cleaning:-
Twice in a Week.**