


SENSOR FAUCET 9V TRASFORMER OPERATED.

Note: This Installation method can be referred for Sensor faucet 9V Transformer operated with & Without Pre-mix valve .This manual can be referred for Below Item codes:-

Product Code
SNR-91019EB
SNR-91019EBPK
SNR-91017EB
SNR-91017EBPK
SNR-35019PMEB
SNR-35019PMEBPK
SNR-35017PMEB
SNR-35017PMEBPK
SNR-15019PMEB
SNR-15019PMEBPK
SNR-15017PMEB
SNR-15017PMEBPK

Note: Technical drawing & images shown in this manual is only for ref purpose, it will vary as per Product code.

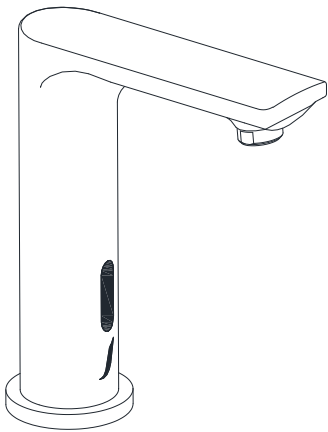

* Representative image


NOTE:-


- 1.Do not install the faucet facing a mirror or any other electronic system operated an infra-red sensor.
- 2.To prevent reflection problem, it is recommended to keep a minimum distance of 1.5meters b/w faucet & Other Items.
- 3.This product should only be fitted by a qualified/certified plumber and should not installed by a non-qualified person.

TEMP.& WATER PRESSURE REQUIREMENTS


	Required Pressure: 1~5 bar
	Required Temperature: 5-65°C

Note: Above are the recommended values for getting Conventional Output.

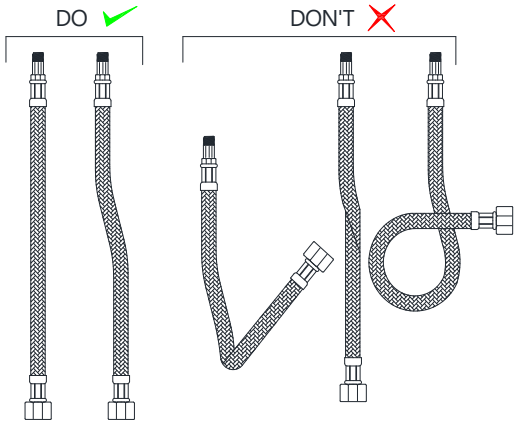

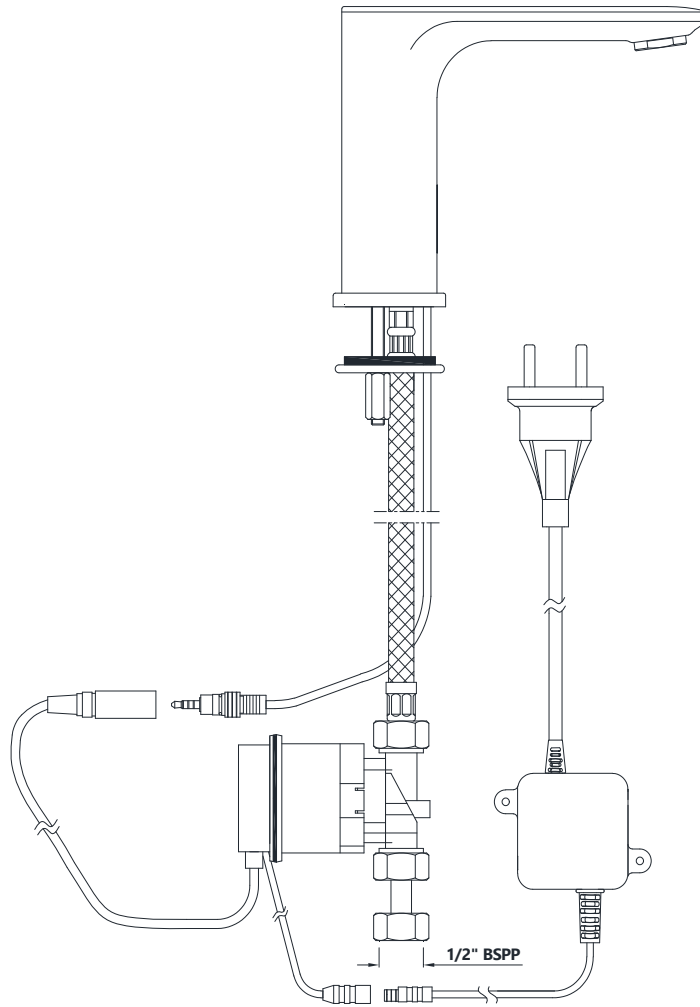WITHOUT PRE-MIX VALVE


* Representative image

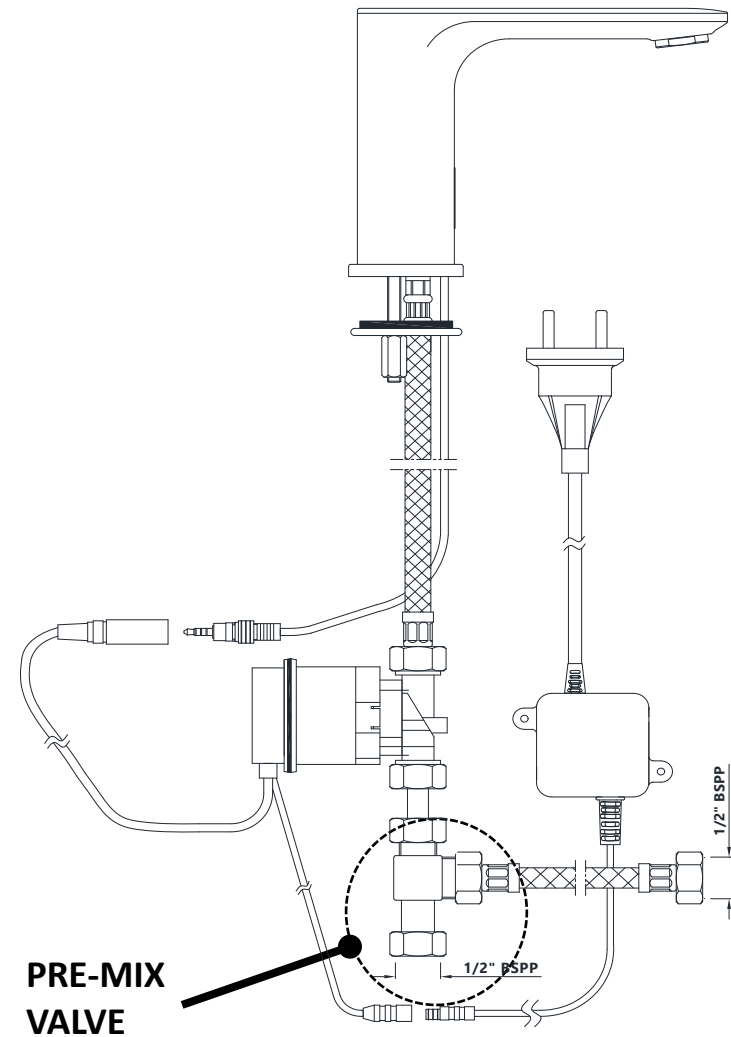WITH PRE-MIX VALVE

* Representative image

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FACUCETS WITH 9V TRANSFORMER OPERATED, WITH & WITHOUT PRE-MIX VALVE.


INSTALLATION WITHOUT PRE-MIX VALVE

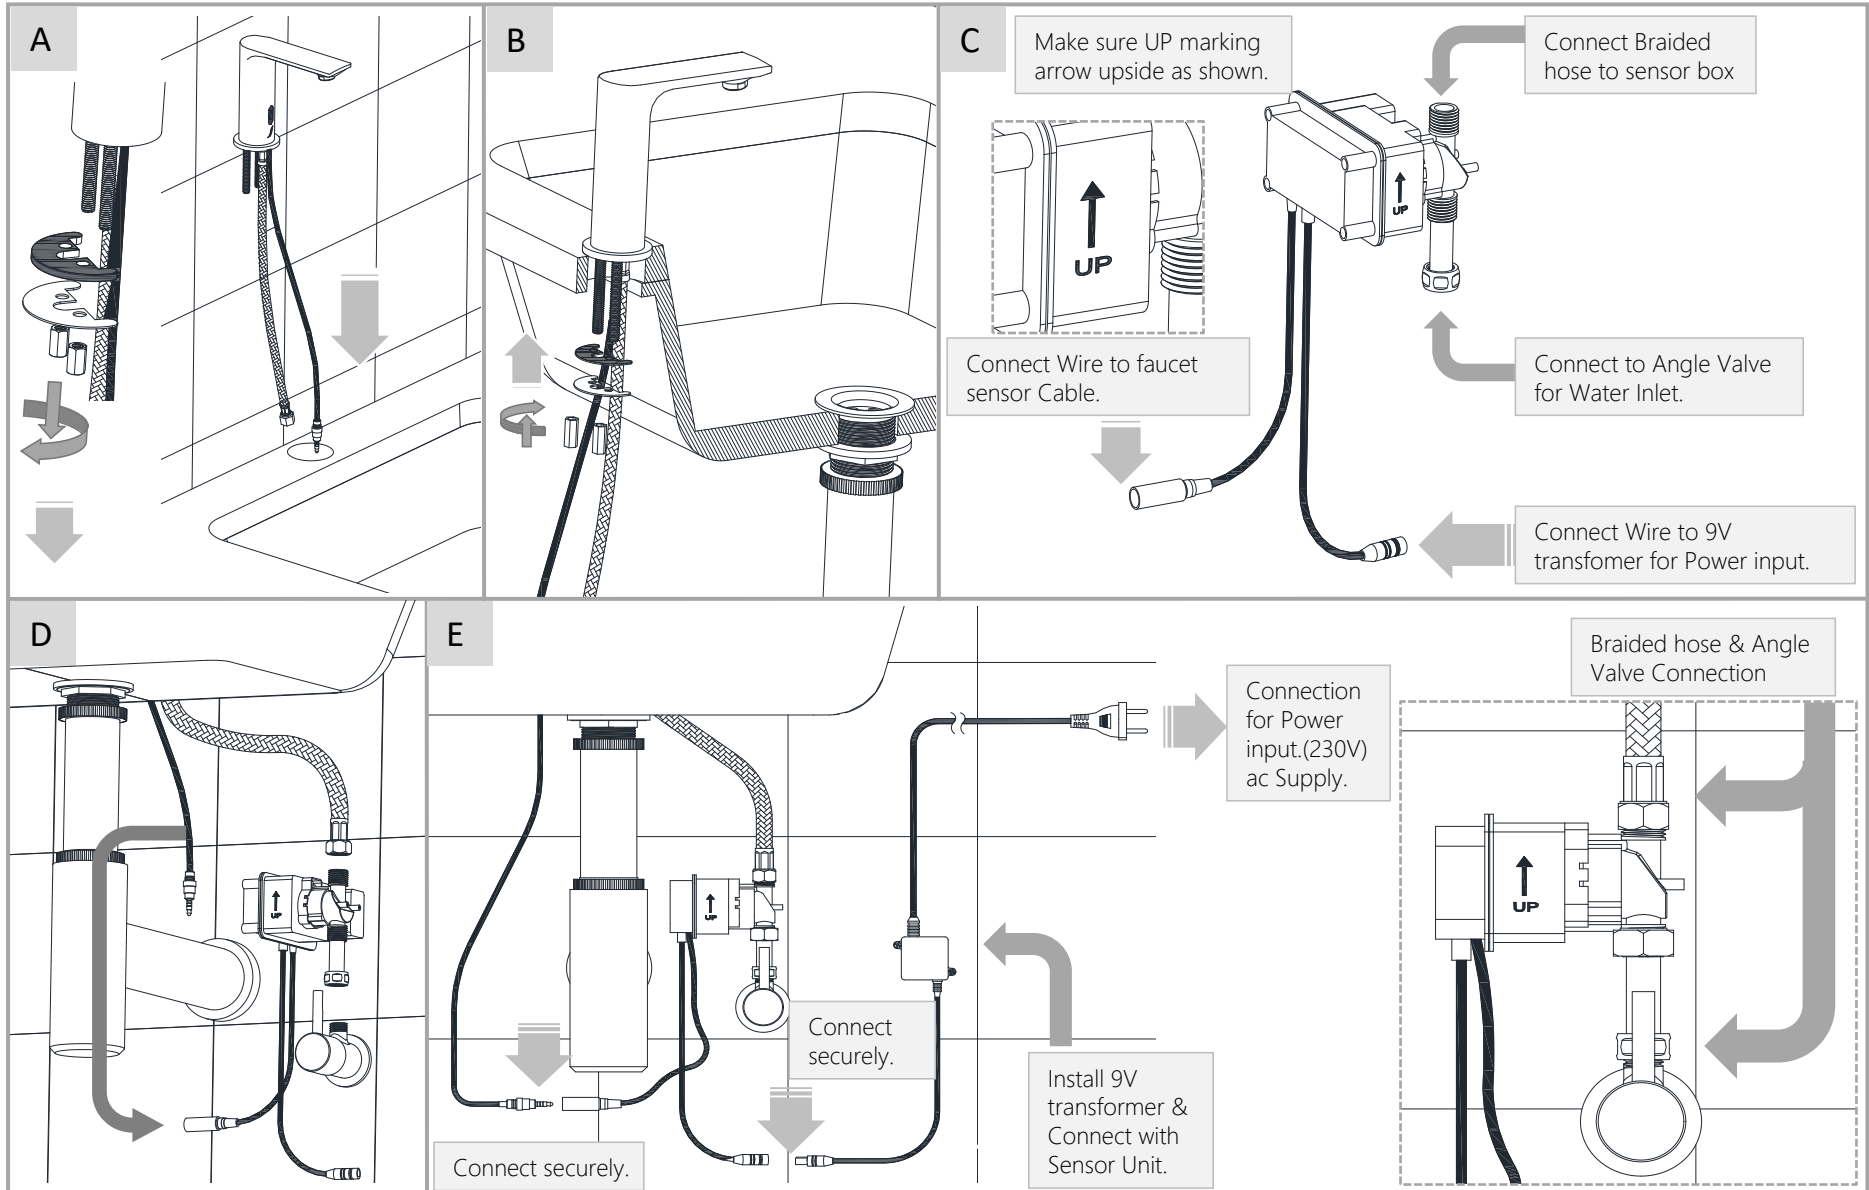

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FACUCETS WITH 9V TRANSFORMER OPERATED, WITH & WITHOUT PRE-MIX VALVE.



F

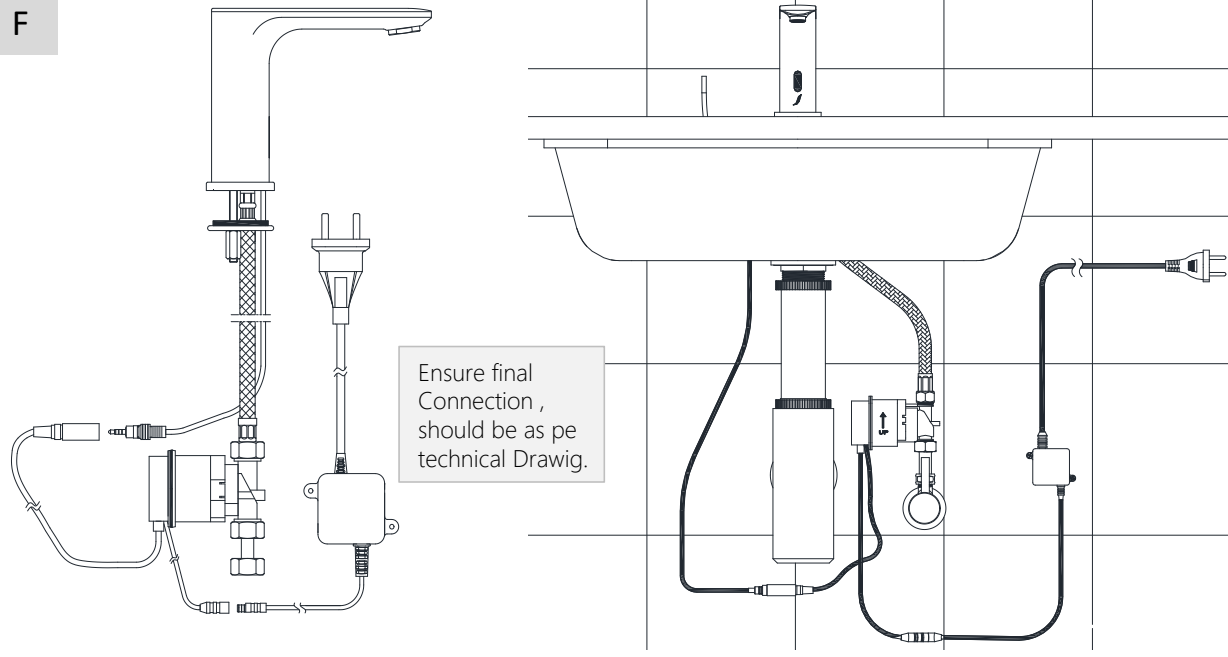

SETTING OF SENSOR RANGE BY Hand Gesture

IMORTANT: If needed, setting adjustment can be done by Hand Gesture

SETTING OF SENSOR RANGE and Valve Shut off Time BY Hand Gesture

Step1 - Use a plain white sheet 15X15 cm and kept around 5 cm in front from sensor and contentiously kept up to desired exit time as mention below steps

Step2 - Red LED blink and Water start Dispensing.

Step 3 - After 12-13 Seconds water automatic stop (Security Time)


*****Initiate Configuration Mode*****

Step 4 - After 10 seconds of Step-3 RED Led Glow if we want to increase range >15-22 cm, remove Paper from Sensor. And exit (Total Time 22-25 seconds)

Step 4a - After 10 seconds again RED LED Glow if we want to set shut off valve time 4-5 seconds and remove paper from Sensor. And Exit (Total Time 35-37 seconds)

Step4b - After further 10 seconds again RED LED Glow and here if we remove paper its go to Factory Default Range (10cm - 15cm). (Total White Paper Kept at Sensor = 42-45 seconds)

Step4c - After further 10 seconds again RED LED Glow and here if we remove paper its go to Factory Default Shut off valve time (2-3 sec.). (Total White Paper Kept at Sensor = 42-45 seconds)

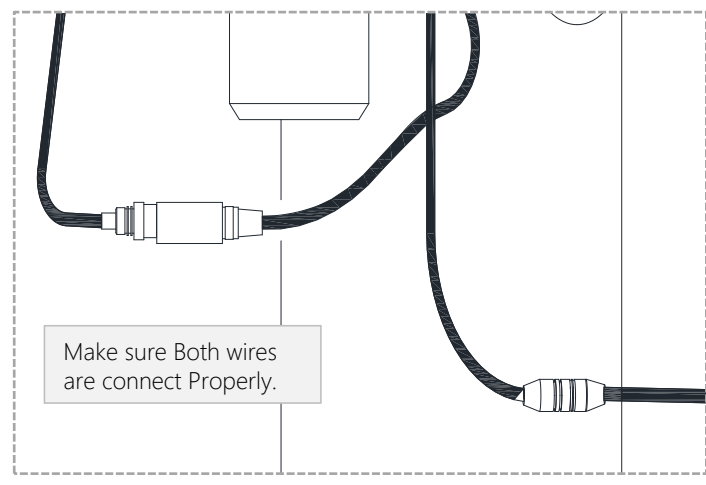


Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FACUCETS WITH 9V TRANSFORMER OPERATED, WITH & WITHOUT PRE-MIX VALVE.




WITH PRE-MIX VALVE

INSTALLATION INCLUDING PRE-MIX VALVE

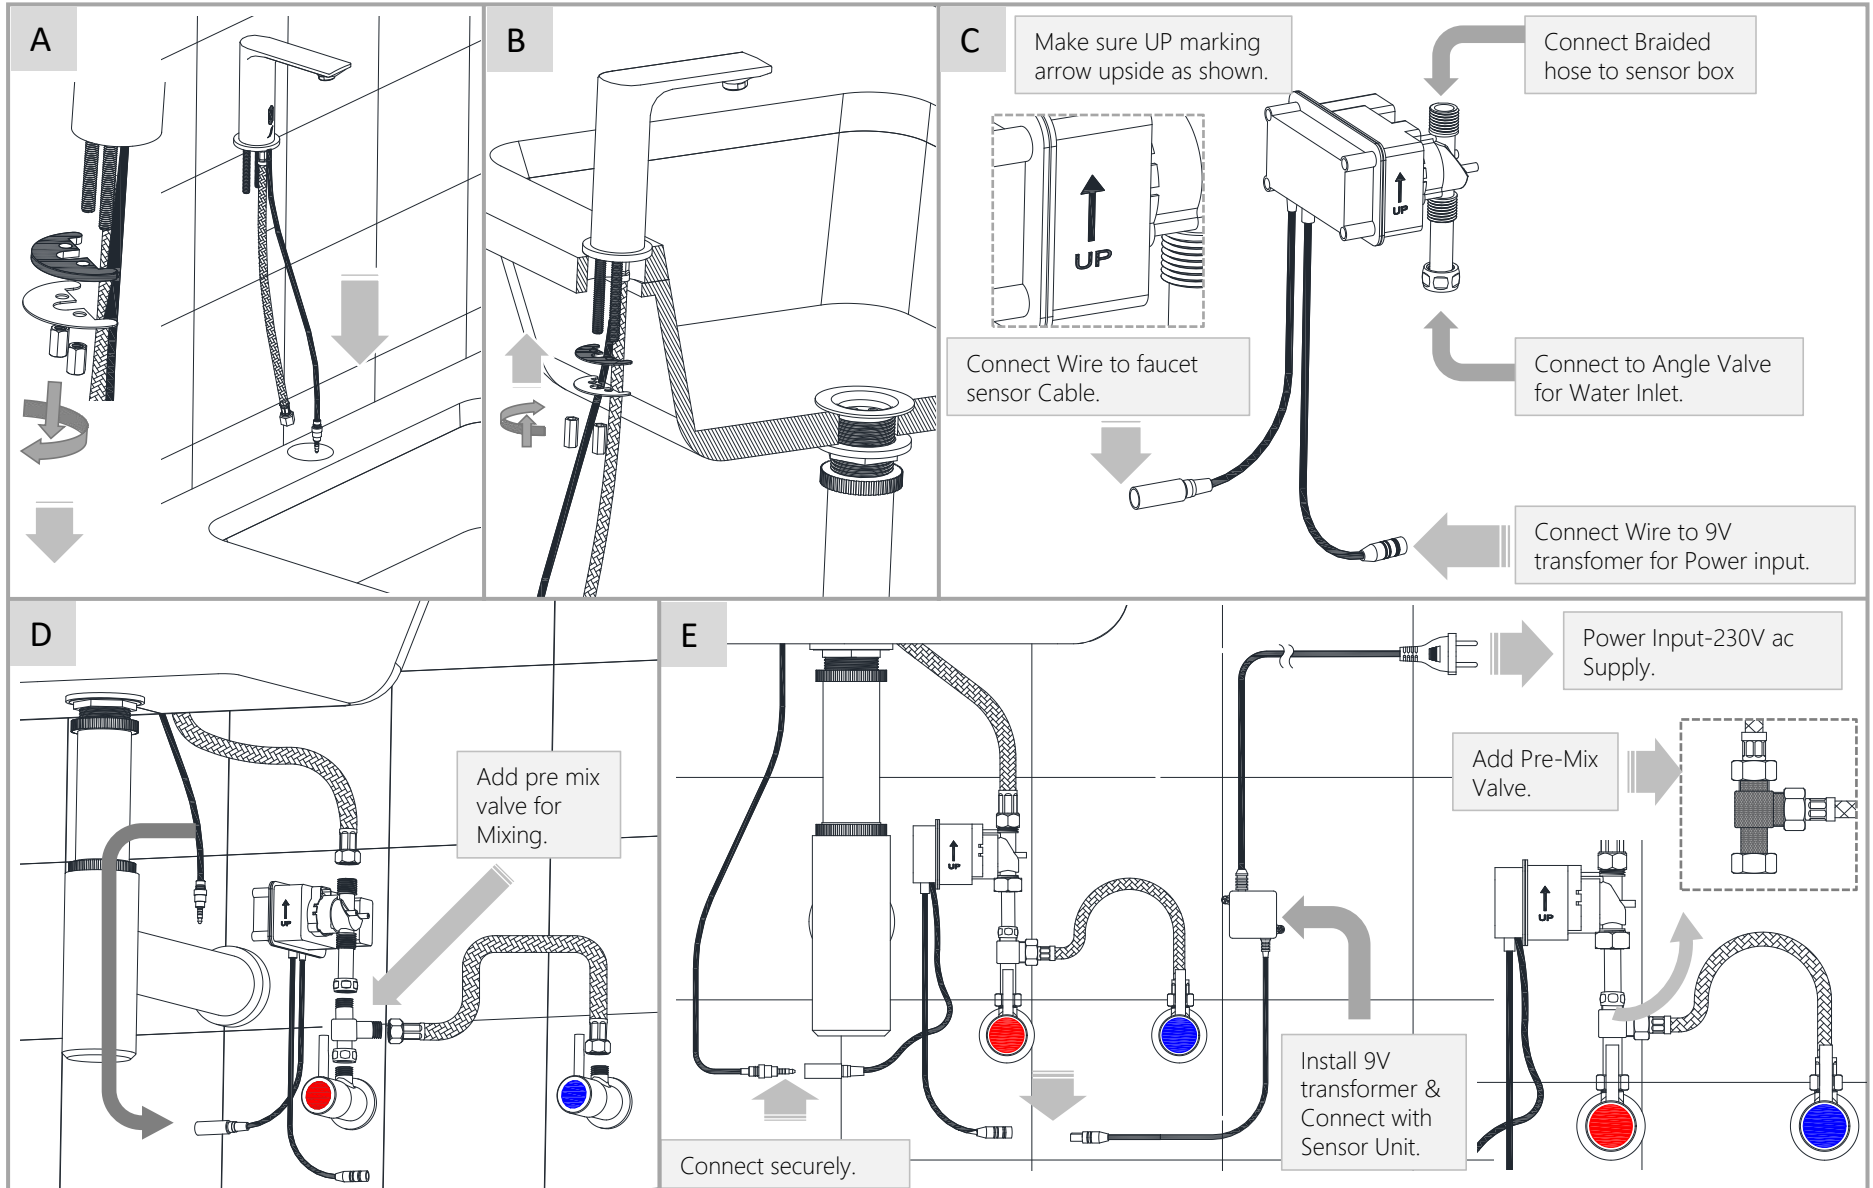



F

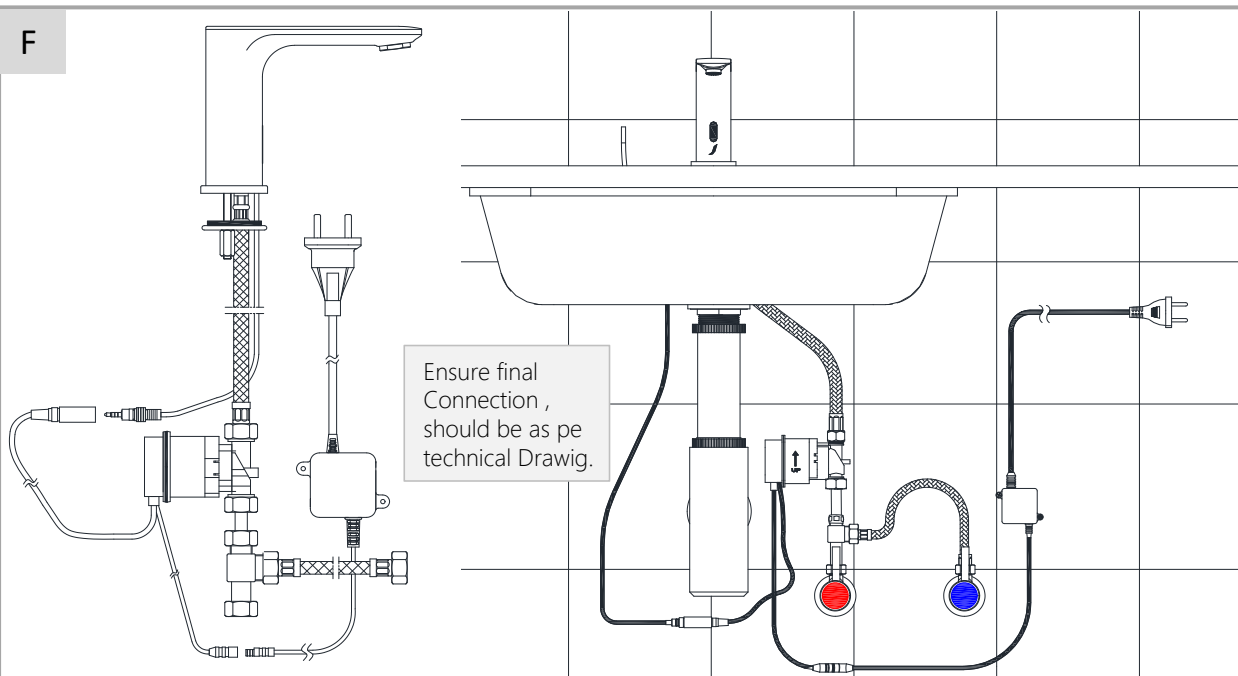

SETTING OF SENSOR RANGE BY Hand Gesture

IMORTANT: If needed, setting adjustment can be done by Hand Gesture

SETTING OF SENSOR RANGE and Valve Shut off Time BY Hand Gesture

Step1 - Use a plain white sheet 15X15 cm and kept around 5 cm in front from sensor and contentiously kept up to desired exit time as mention below steps

Step2 - Red LED blink and Water start Dispensing.

Step 3 - After 12-13 Seconds water automatic stop (Security Time)


*****Initiate Configuration Mode*****

Step 4 - After 10 seconds of Step-3 RED Led Glow if we want to increase range >15-22 cm, remove Paper from Sensor. And exit (Total Time 22-25 seconds)

Step 4a - After 10 seconds again RED LED Glow if we want to set shut off valve time 4-5 seconds and remove paper from Sensor. And Exit (Total Time 35-37 seconds)

Step4b - After further 10 seconds again RED LED Glow and here if we remove paper its go to Factory Default Range (10cm - 15cm). (Total White Paper Kept at Sensor = 42-45 seconds)

Step4c - After further 10 seconds again RED LED Glow and here if we remove paper its go to Factory Default Shut off valve time (2-3 sec.). (Total White Paper Kept at Sensor = 42-45 seconds)

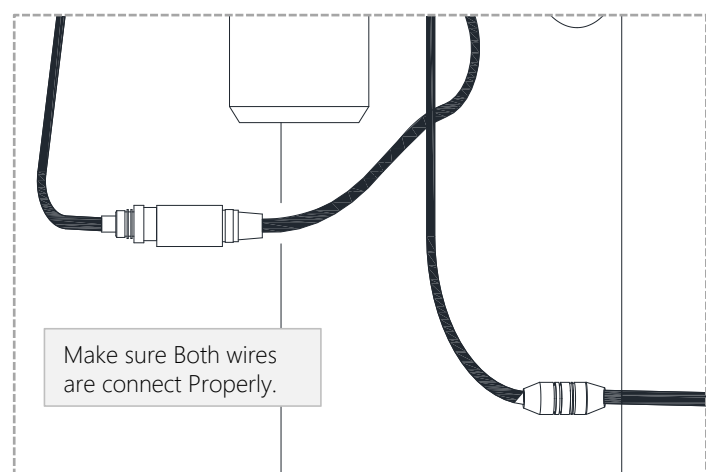


Note: THIS INSTALLATION MANUAL CAN BE REFFERED FOR SENSOR FACUCETS WITH 9V TRANSFORMER OPERATED, WITH & WITHOUT PRE-MIX VALVE.



Note: Apply liquid soap pH-B/W 5~7 or Glitz .



Apply soft cotton cloth

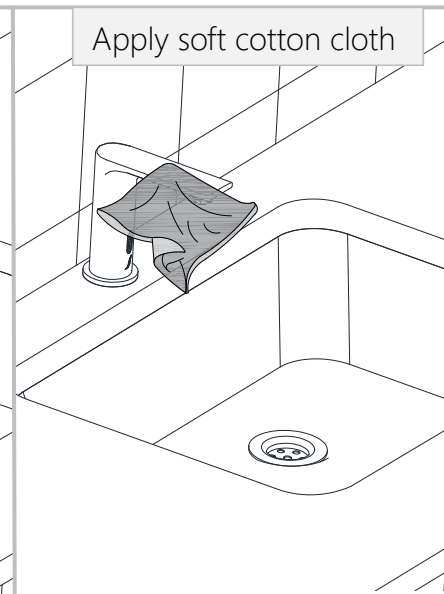

Apply soft cotton cloth




✗ DON'T



✗ DON'T

Don't apply Scrub

Steps & Cleaning agents requirements for Cleaning.

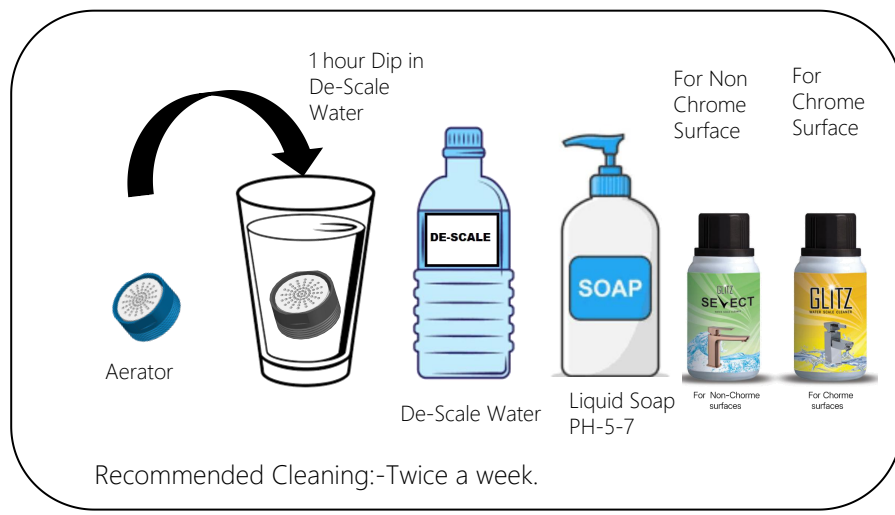

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR SENSOR FACUCETS WITH 9V TRANSFORMER OPERATED, WITH & WITHOUT PRE-MIX VALVE.