



INSTALLATION GUIDE

Hand shower (Health faucet)


Requirements:-

- ◆ Screw driver, wall plug & screw (Included)
- ◆ Angular stop cock live connection.
- ◆ Wrench for fitting & tightening.



Note: THIS INSTALLATION METHOD CAN ALSO BE REFERRED FOR ALL HEALTH FACUETS.





*** Representative image**

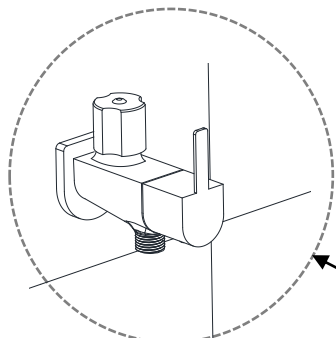



Supply off water before connection.

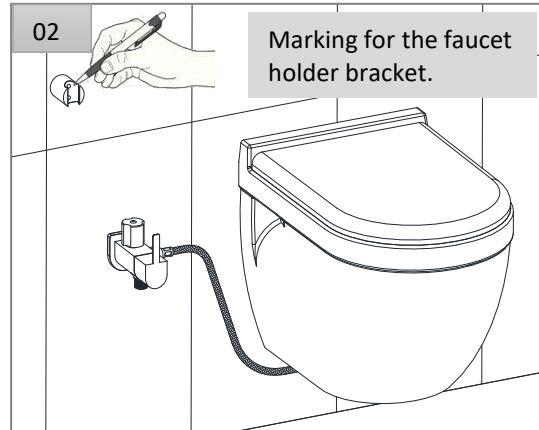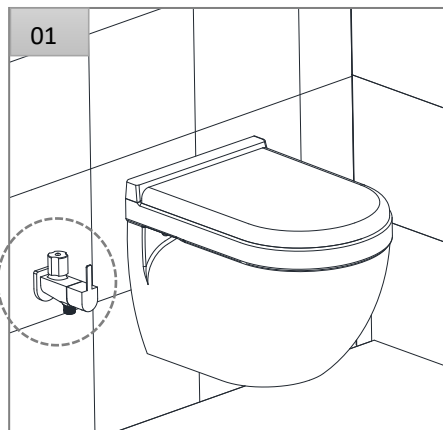


Marking for the faucet holder bracket.

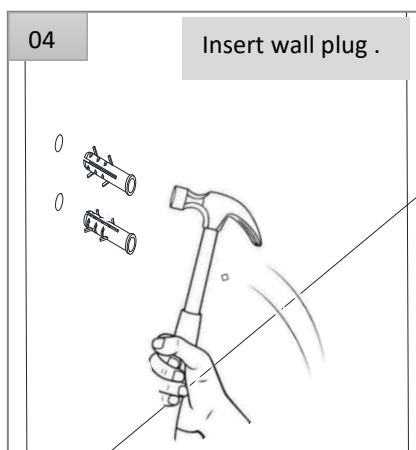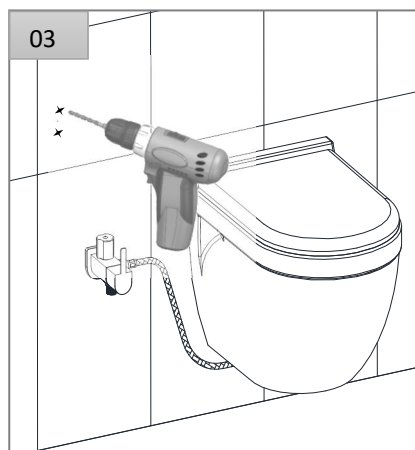


Insert wall plug .

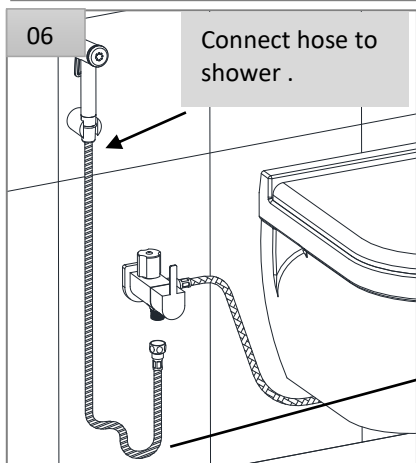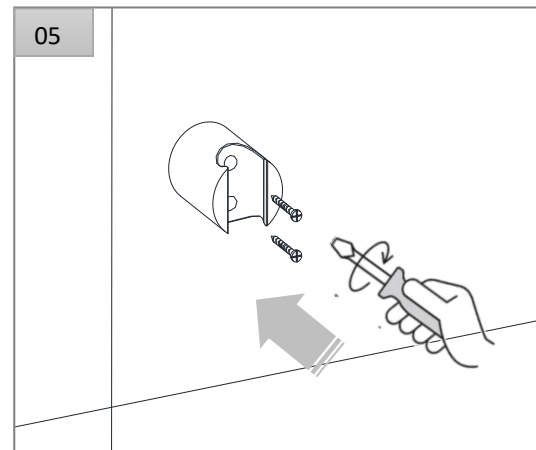

Connect hose to shower .

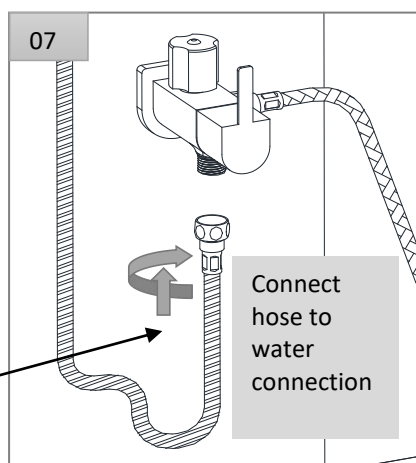

Connect hose to water connection

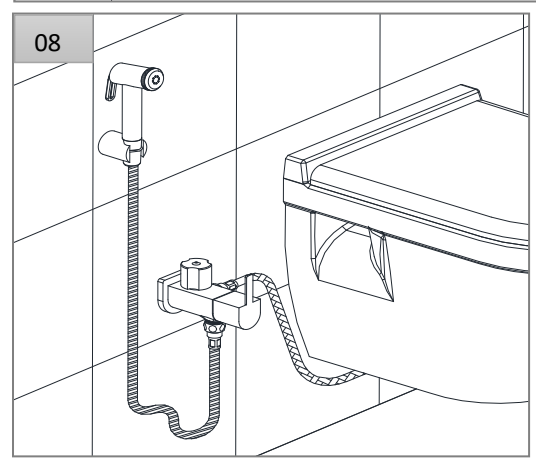

Safety Tips & Cleaning instruction.

- ❖ Make sure shower is mounted at reachable height.
- ❖ Make sure no loose fitting:
- ❖ Avoid any leakage during connection.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Use soft water & wipe up with soft cotton cloth.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface

For
Chrome
Surface



**RECOMMENDED
CLEANING:- TWICE IN
WEEK**

Note: THIS INSTALLATION METHOD CAN ALSO BE REFERRED FOR ALL HEALTH FACUETS.