




## INSTALLATION GUIDE









### Requirements:-


- ◆ Pre-installed concealed body ALD-649C
- ◆ Teflon tape.
- ◆ Hot & cold water line.
- ◆ Wrench for fitting & tightening.

**NOTE: THIS INSTALLATION MANUAL CAN BE REFERRED FOR EXPOSED PART KIT WALL THERMOSTATIC VALVE FOR HEALTH FAUCET.**

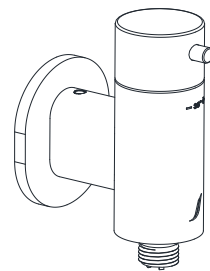


\* Representative image

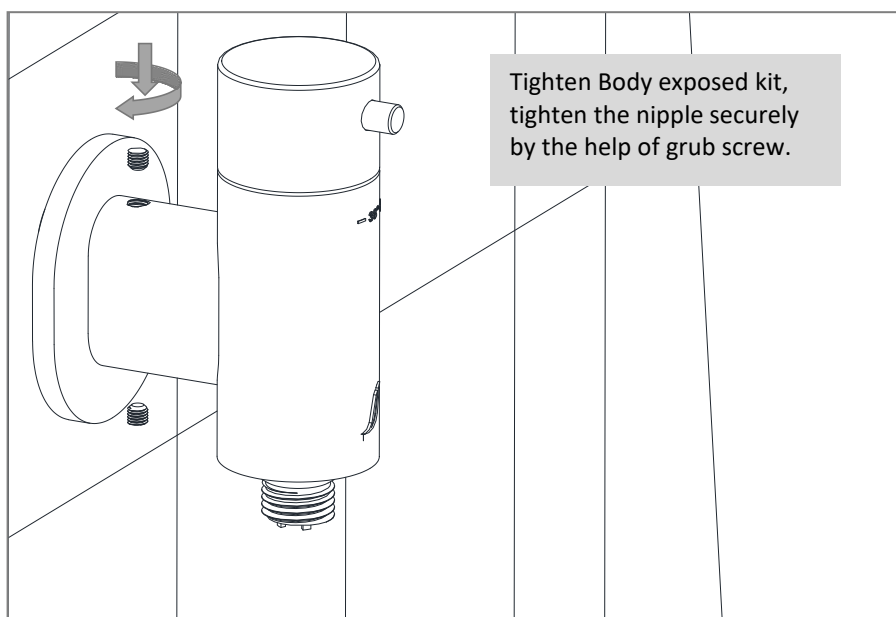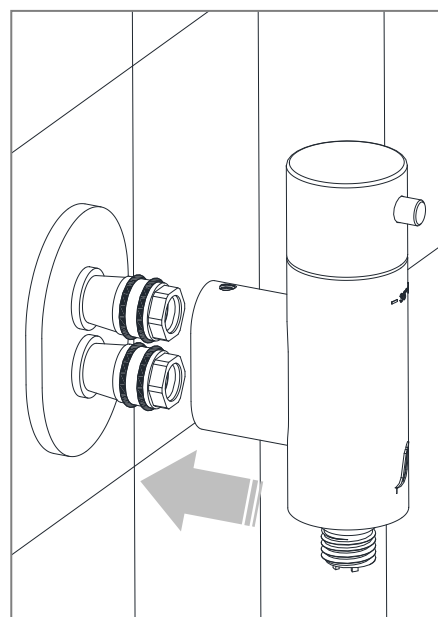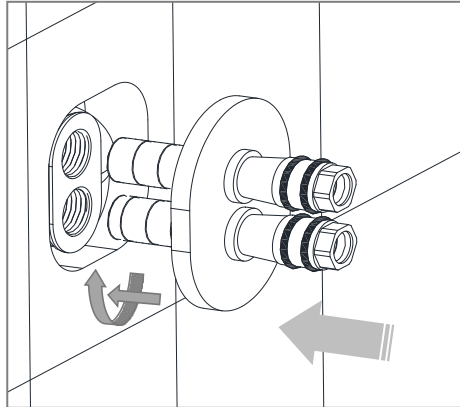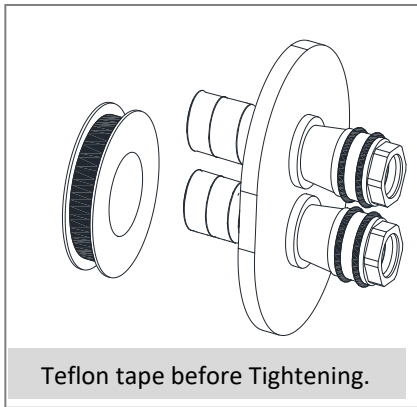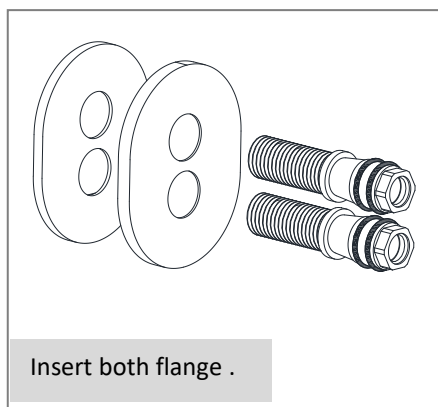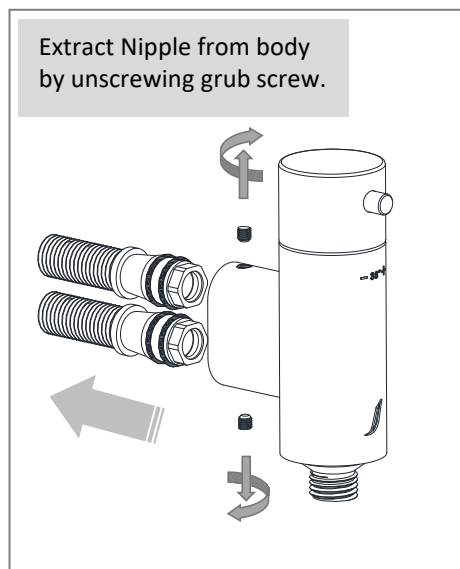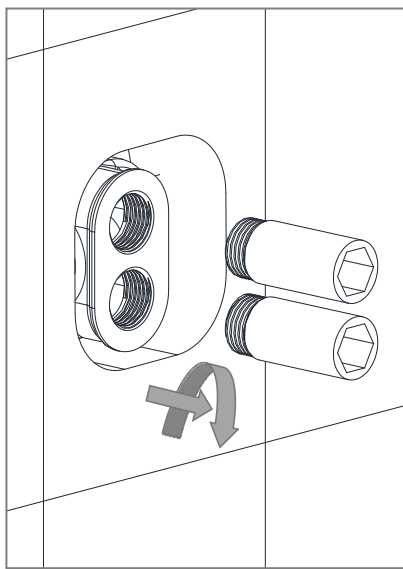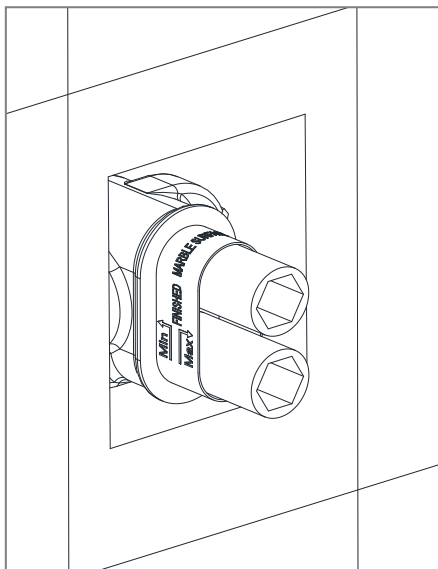


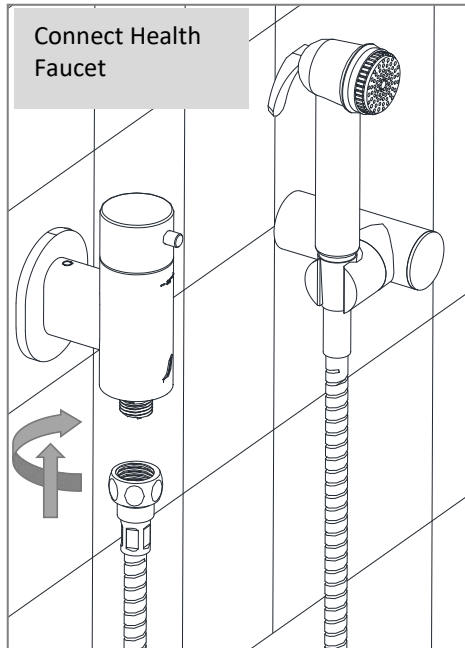

## How to Operate :-

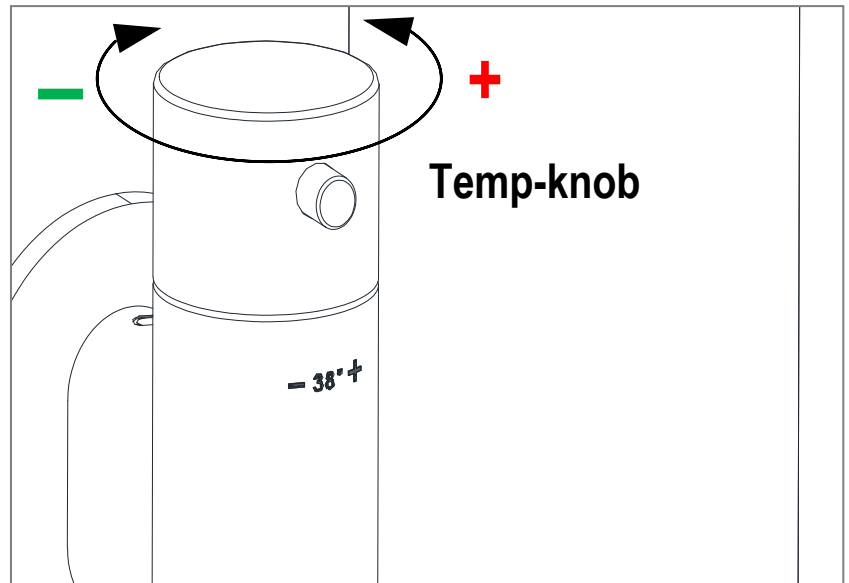

## Safety Feature+Additional Temperature feature.

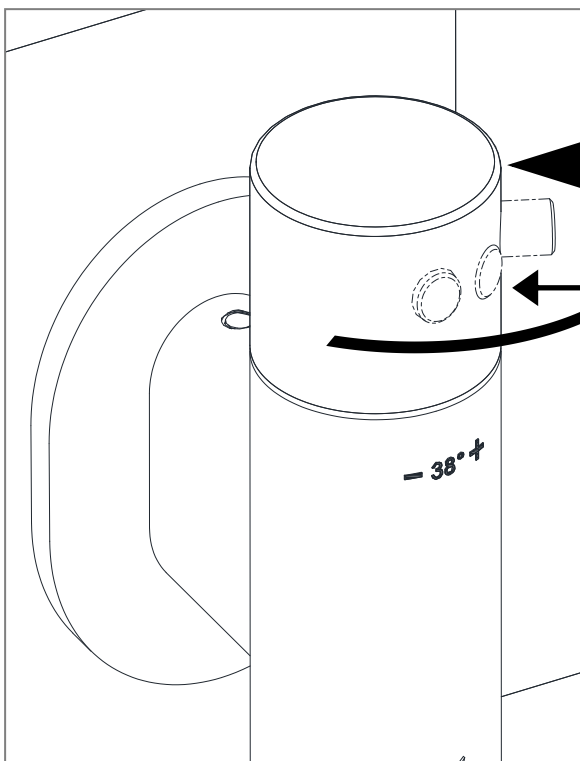

Press+Rotate & Release button if Water-temperature required more than 38°

### Safety feature:

Standard/ default Water temperature will not exceed more that 38°

## Safety Tips :-

- ❖ Make sure Tile surface is finished B/W Min & Max marking given on Label.  
Concealed body to be installed on reachable Height.
- ❖ Make sure no loose fitting:
- ❖ Avoid any leakage during connection.
- ❖ Don't connect pipes forcefully , can lead to damage concealed/pipe.

**NOTE:THIS INSTALLATION MANUAL CAN BE REFFERE FOR EXPOSED PART KIT WALL THERMOSTATIC VALVE FOR HEALH FAUCET.**



### Correct Cleaning Steps:

#### 1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

#### 2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

#### 3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

#### 4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

#### ✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non  
Chrome  
Surface

For  
Chrome  
Surface



Recommended Cleaning:-  
Twice in a Week.

**NOTE: THIS INSTALLATION MANUAL CAN BE REFERRED FOR EXPOSED PART KIT WALL THERMOSTATIC VALVE FOR HEALTH FAUCET.**