




Single Lever Surgical Purpose Elbow Action Sink Mixer (Wall Mounted)

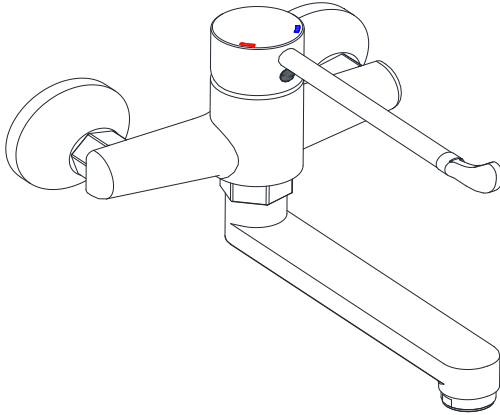


Temp & water pressure Requirement.


	Working Pressure: 1~3 bar
	Required Temperature: 5-65°C

- **Working Pressure:-**The water pressure should be Between 1 and 3 bar for proper functioning.
- **Required Temperature:-** The water temperature within the range of 5-65° for safe & effective use.
- **Note:-** These are recommended values for achieving conventional /Optimum output.


Country wise leg adjustment.

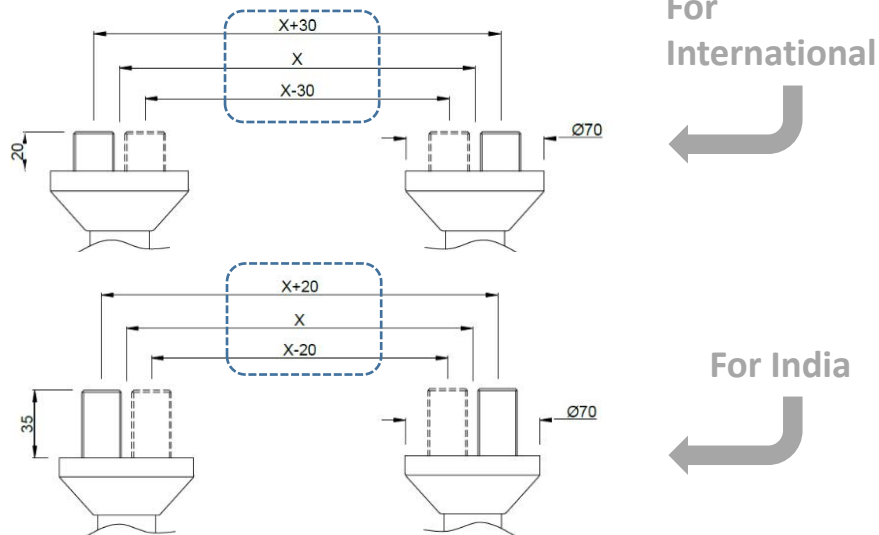

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE SERGICAL ELBOW ACTION SINK MIXER WALL MOUNTED.

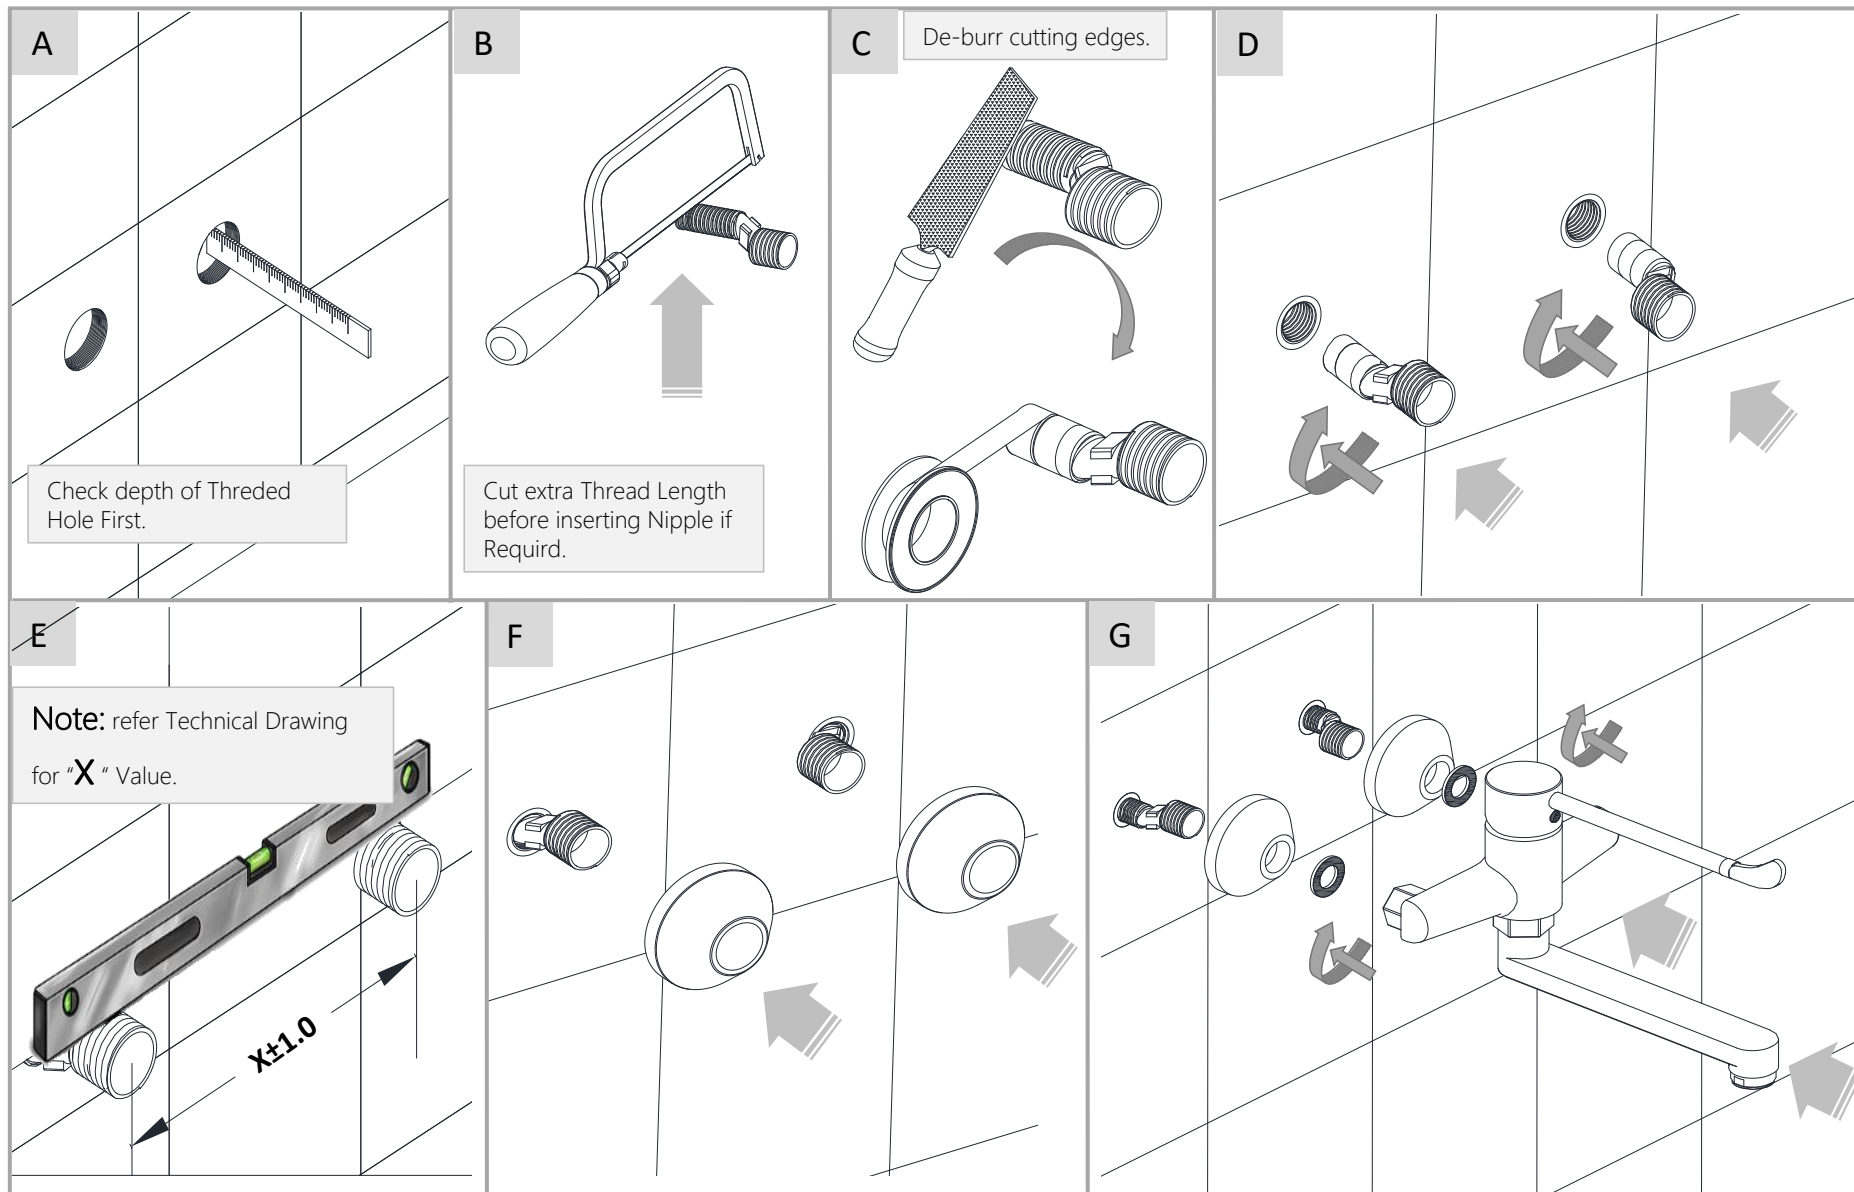

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE SERGICAL ELBOW ACTION SINK MIXER WALL MOUNTED.

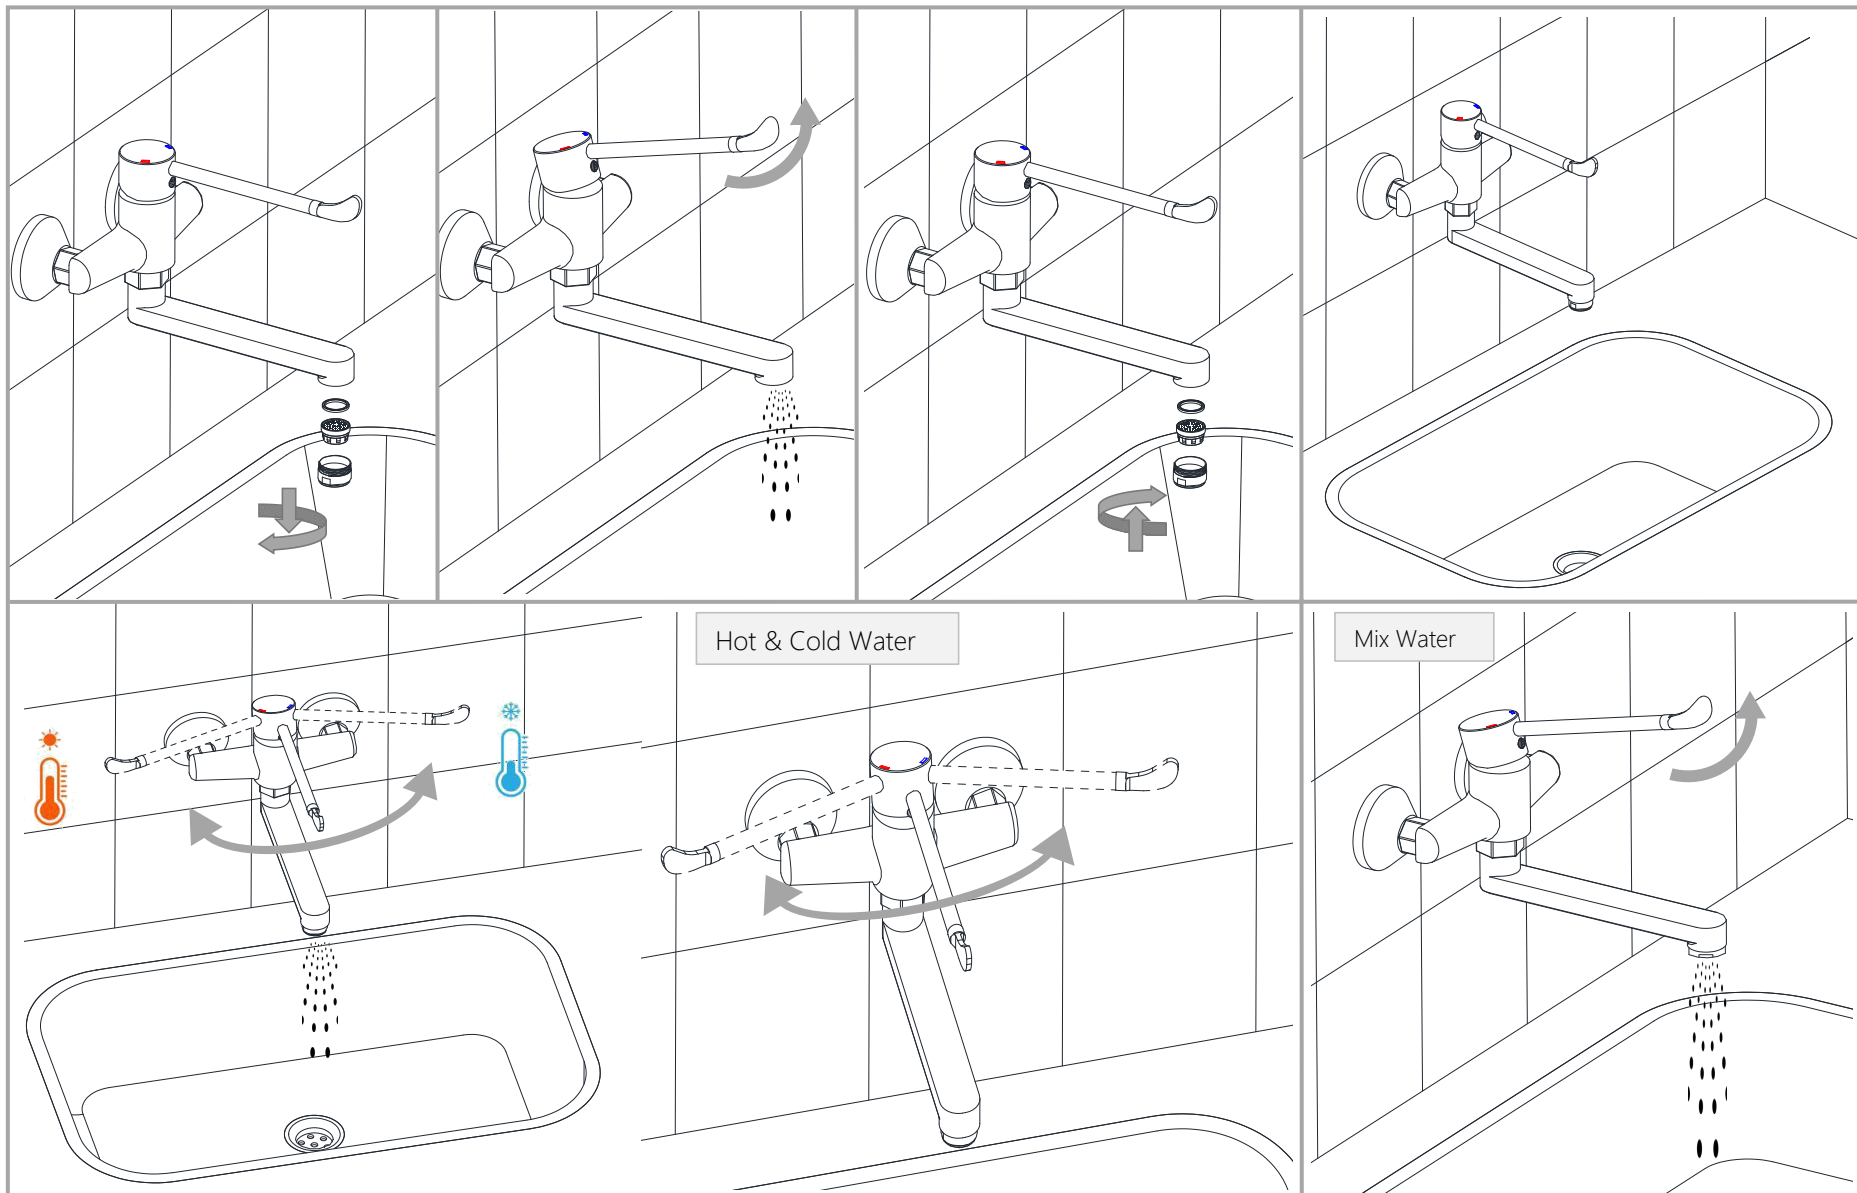

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE SERGICAL ELBOW ACTION SINK MIXER WALL MOUNTED.



LIQUID SOAP PH-5~7 Note: Apply liquid soap pH-B/W 5~7 or Glitz .	Apply soft cotton cloth	WATER	Apply soft cotton cloth
❌ DON'T POWDER SOAP	Don't apply Scrub ❌ DON'T	<u>Steps & Cleaning agents requirements for Cleaning.</u> Aerator 1 hour Dip in De-Scale Water De-Scale Water Liquid Soap PH-5-7 For Non-Chrome Surface For Chrome Surface Recommended Cleaning:- Twice a week.	

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE SERGICAL ELBOW ACTION SINK MIXER WALL MOUNTED.